 


E.X.AI.AZ38
E.X.AI.IZ38
E.A.AI.AZ38
E.A.AI.IZ38






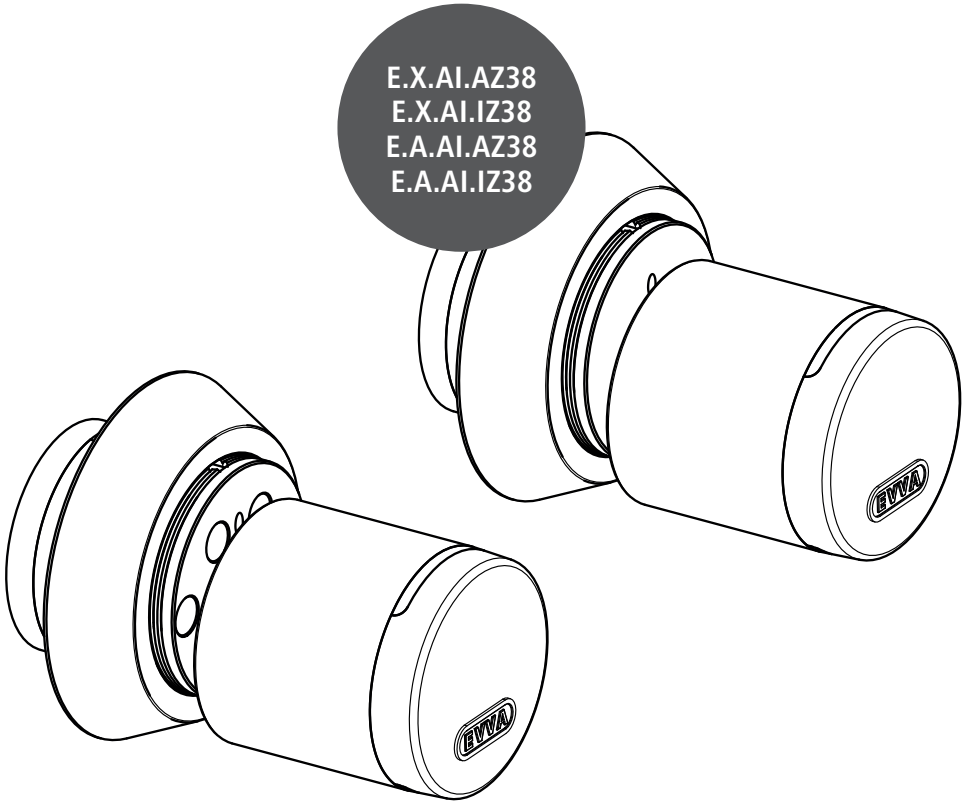


Xesar & AirKey











Montageanleitung | Assembly manual | Montagehandleiding

Instructions de montage | Istruzioni di montaggio | Montážní návody



Montážne návody | Instrukcje montażu | Installationsanvisningar

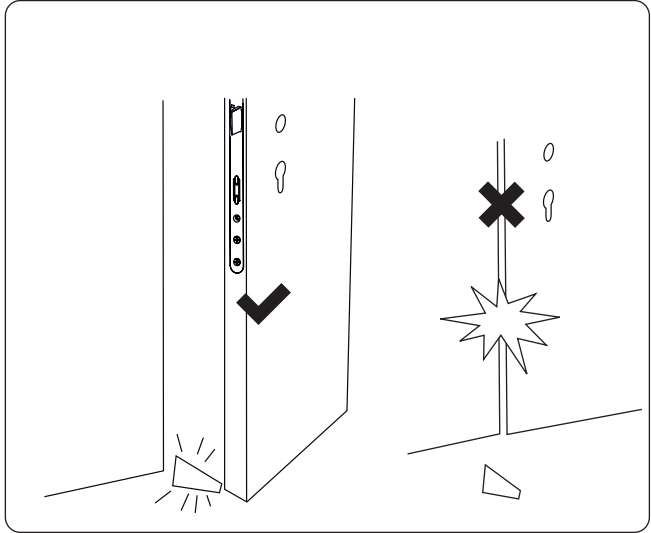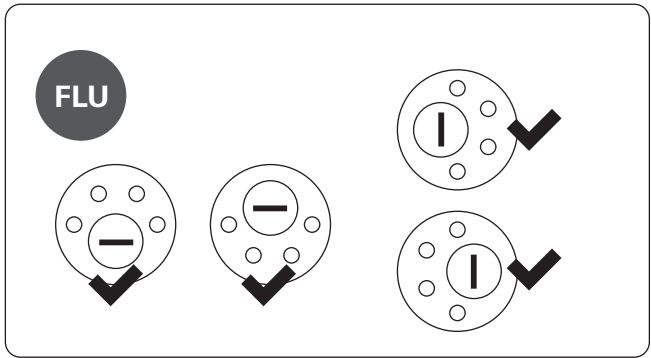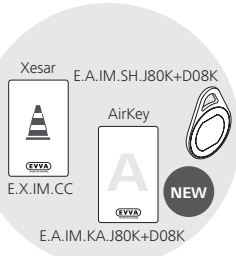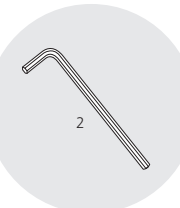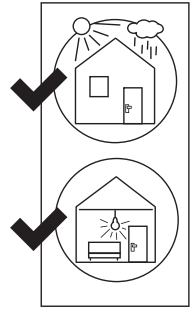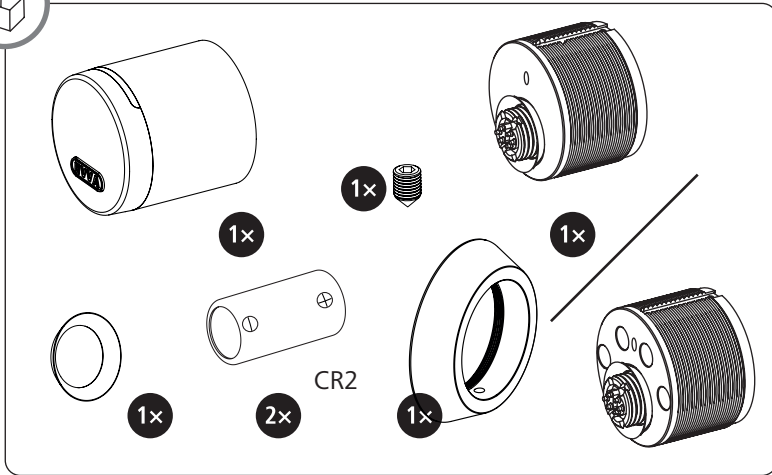      




1

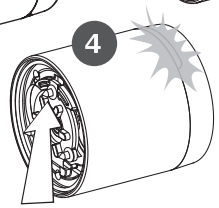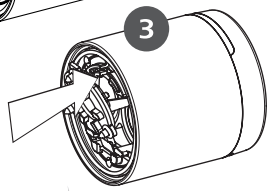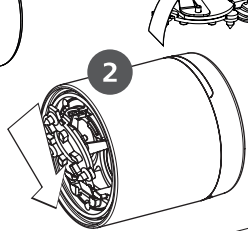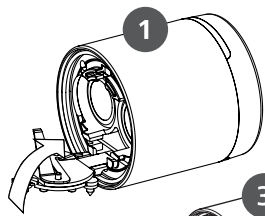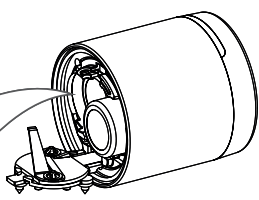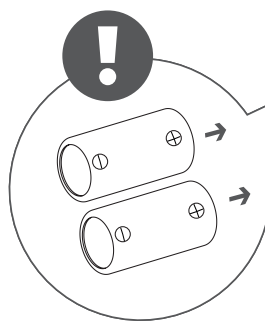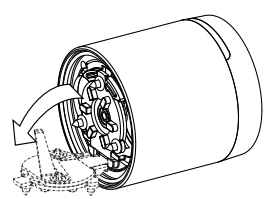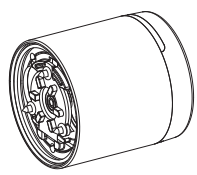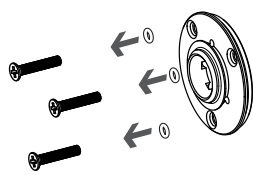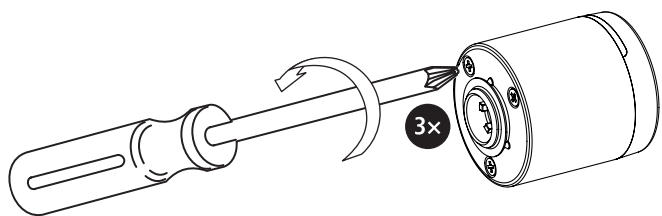          


IP65 ✓

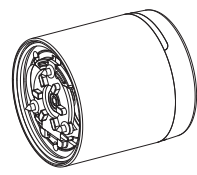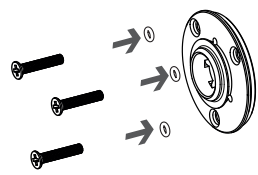  


0,5 Nm

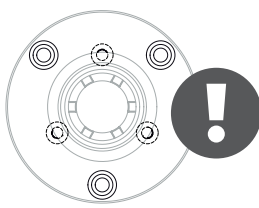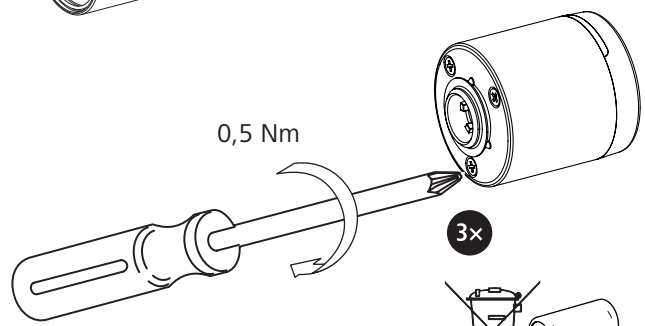   


2

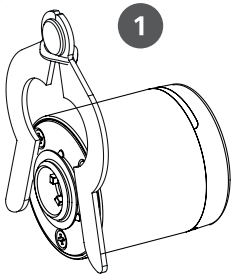 


1

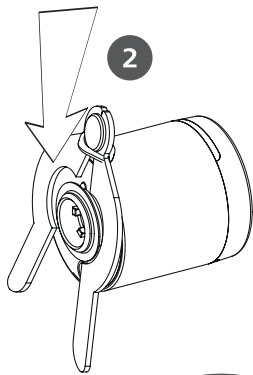 

2



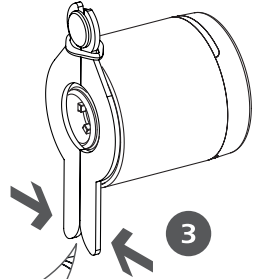 


3

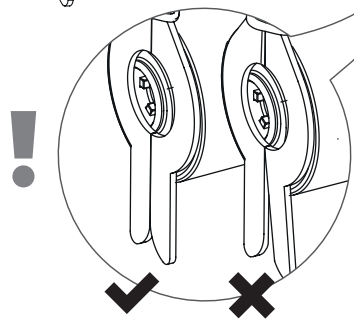 


IP65 ✓

   
3

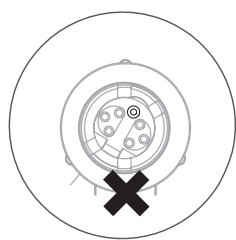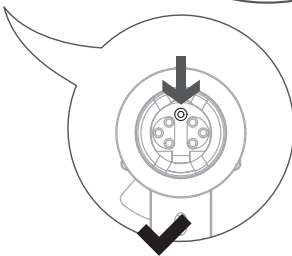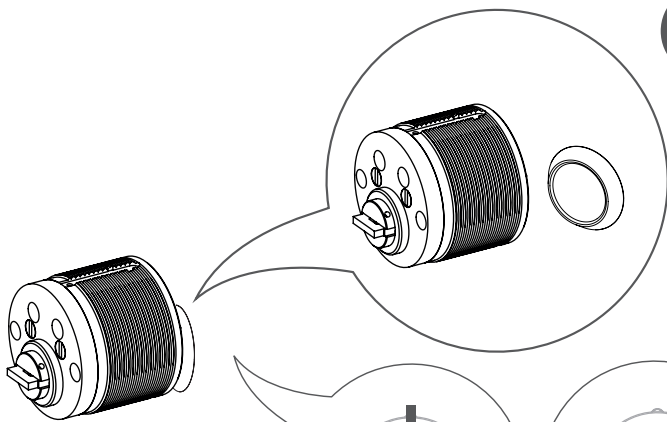


4

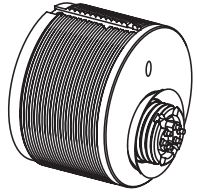 

1

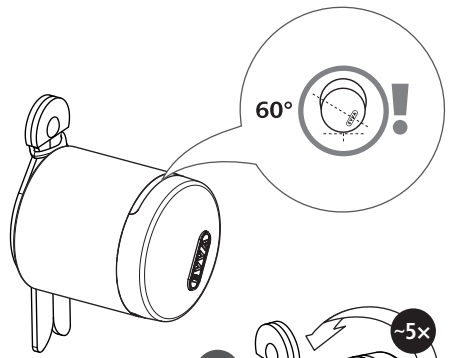 


60°

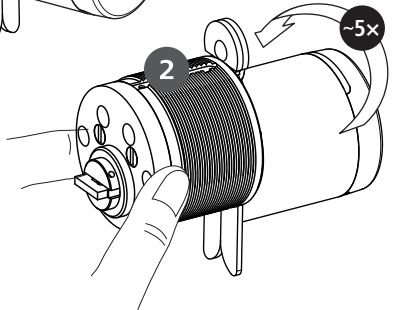 


2

~5x

 5

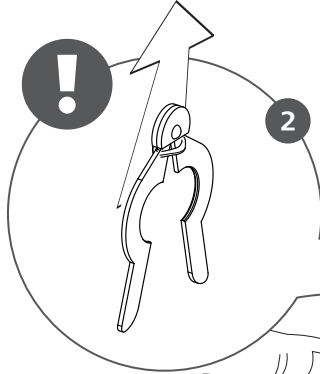


2

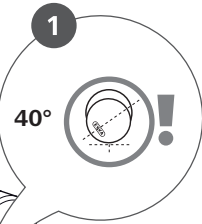 


1

 40°

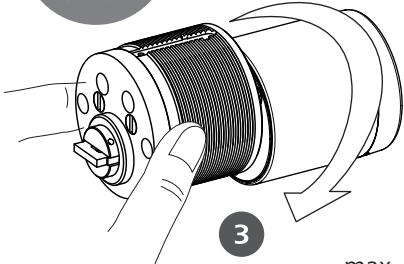


3

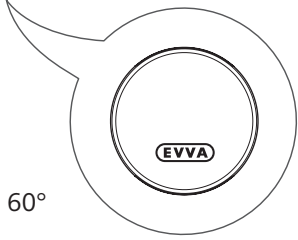 



max. ~ 60°

 6


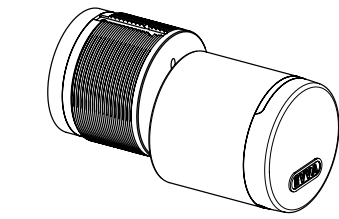


1

  AirKey Xesar


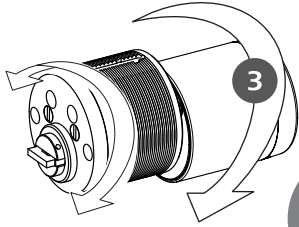
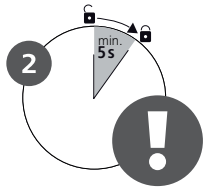


CHECK

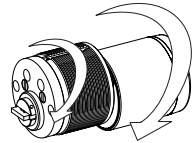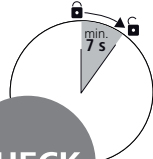  




7

   AZ38

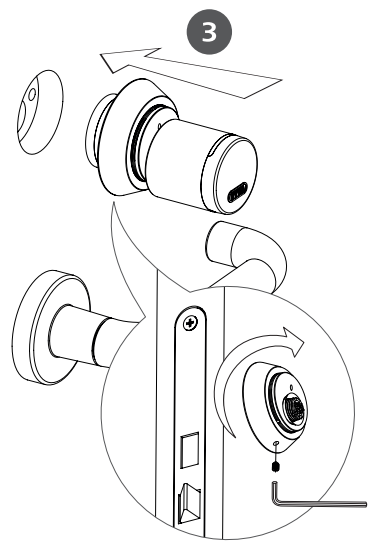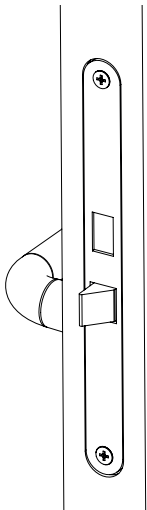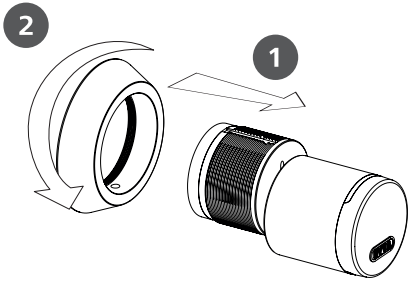

7

   
IZ38

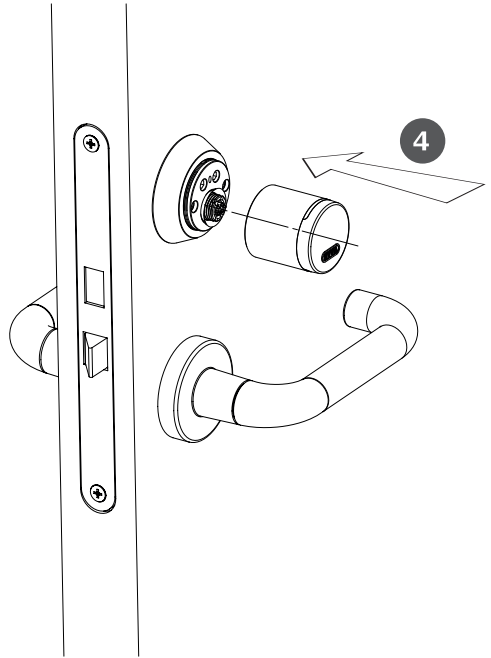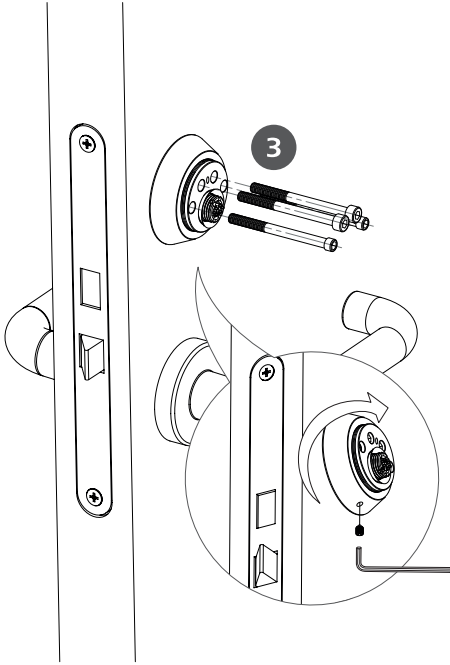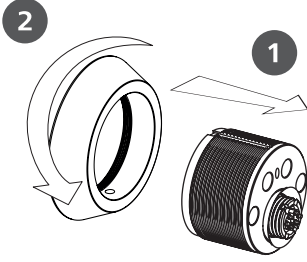

8



 CHECK

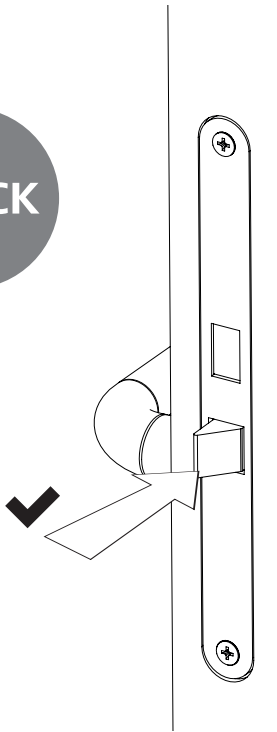



2



1x

1

  AirKey Xesar

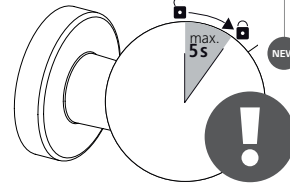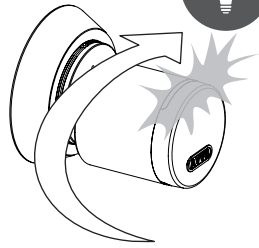



9

AirKey



<https://airkey.evva.com>

  Xesar

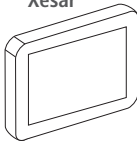

CE



www.evva.com

EVVA Sicherheitstechnologie GmbH | Wienerbergstraße 59-65 | A-1120 Wien

L:AN.MNTE.AZ38.IZ38.SN | 20R1