 
 


E.X.AI.AZ29
E.X.AI.AZ28
E.X.AI.AZ25
E.A.AI.AZ29
E.A.AI.AZ28
E.A.AI.AZ25

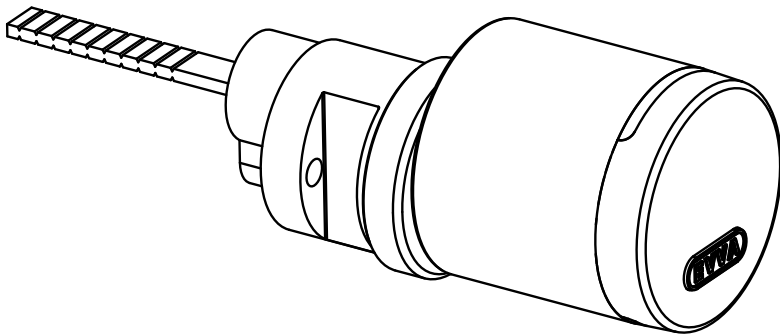


Xesar & AirKey

Montageanleitung | Assembly manual | Montagehandleiding
Instructions de montage | Istruzioni di montaggio | Montážní návody
Montážne návody | Instrukcje montażu | Installationsanvisningar

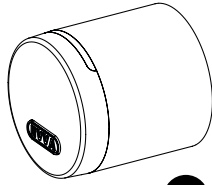

 
1x

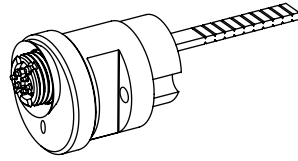

1x




 1x




CR2

 2x

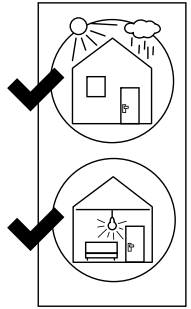

PH0 + PH2

 

E.ZU.PZ.ZW01



E.X.IM.CC

E.A.IM.SH.J80K+D08K

 
 
 
 
 
 


E.A.IM.KA.J80K+D08K










NEW




FZG

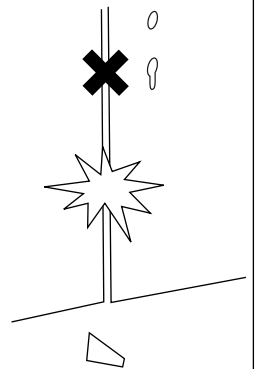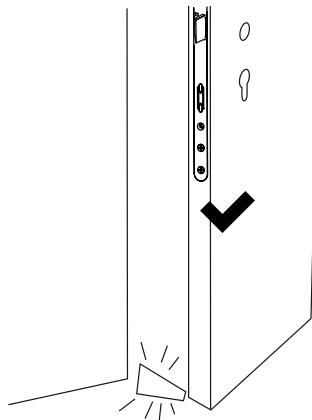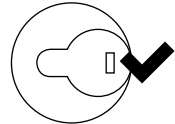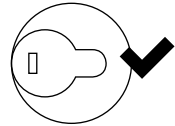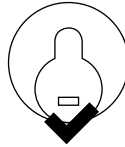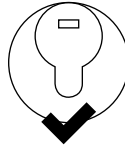



1

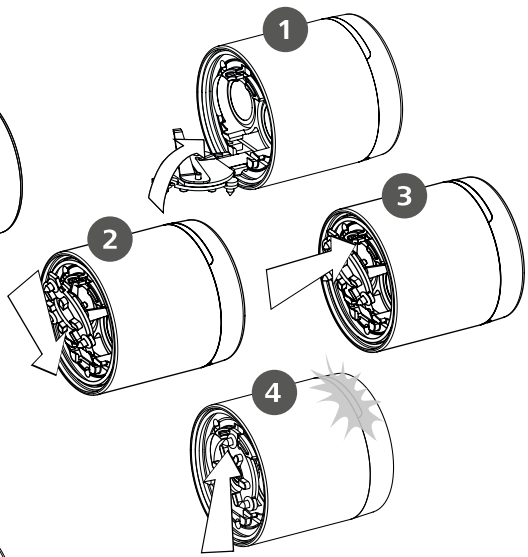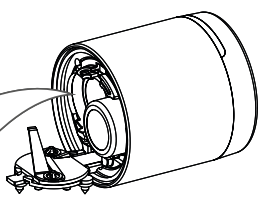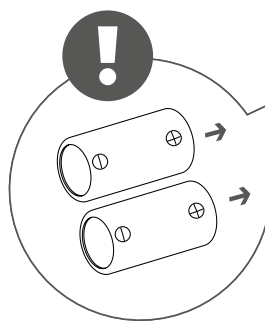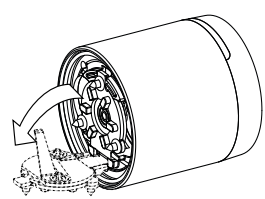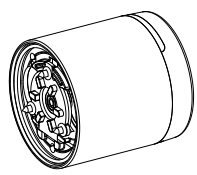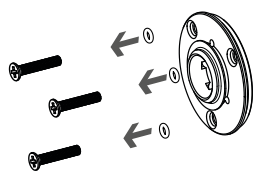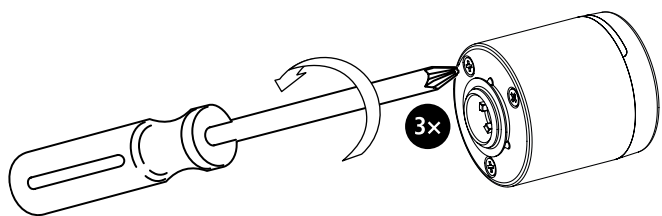       





IP65 ✓

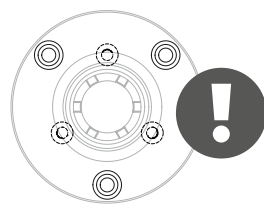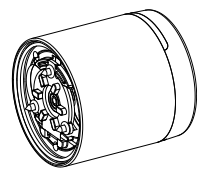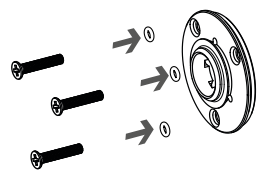   


0,5 Nm

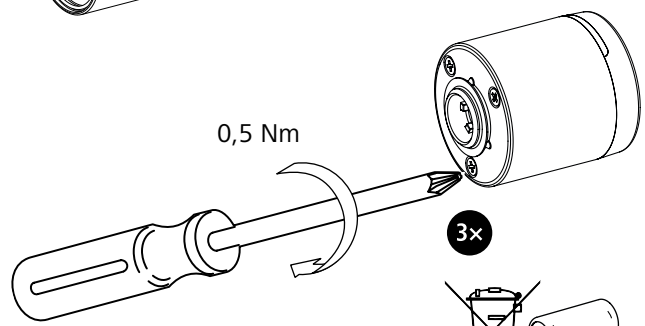  



2

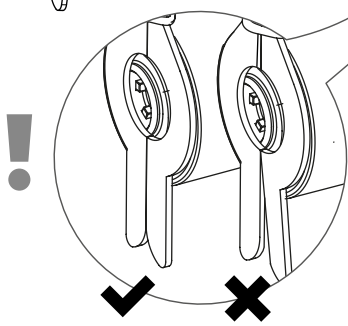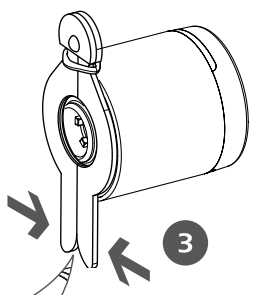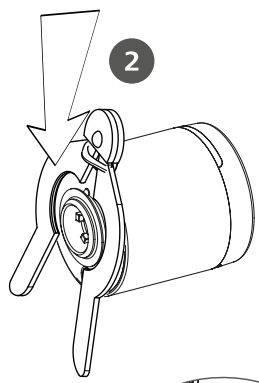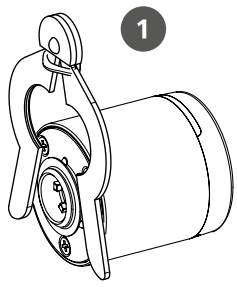    


3

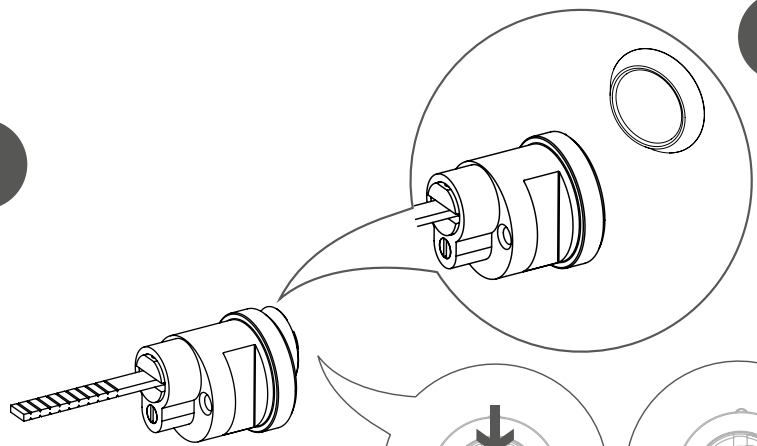 



IP65 ✓

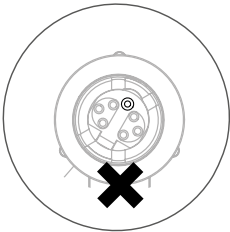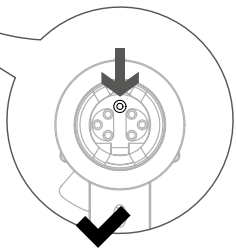  

4

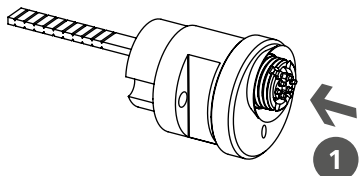 


1

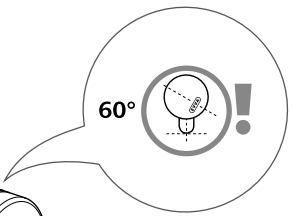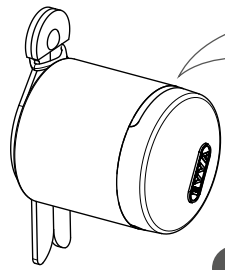  


60°

 2

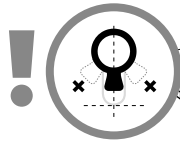

~5x

 
5

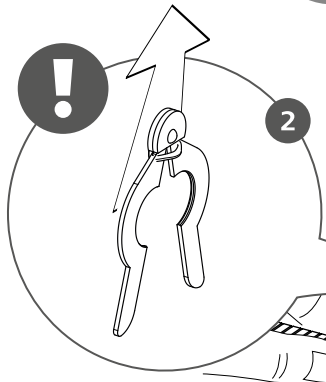

2



1

 40°

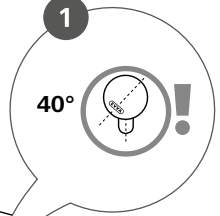


3

  max. ~ 60°

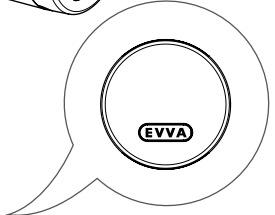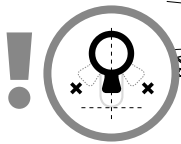


6

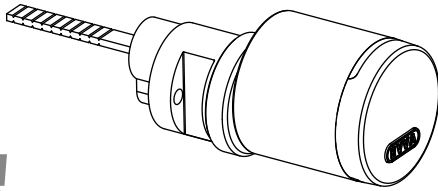 



1

AirKey

 
Xesar

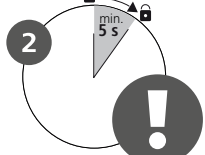

2

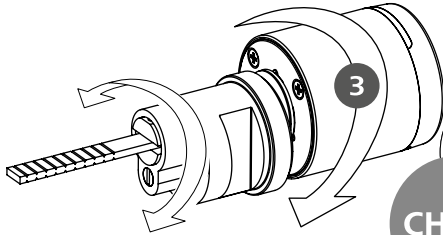 
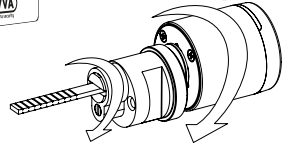 


3

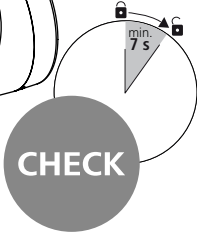 

CHECK

  7

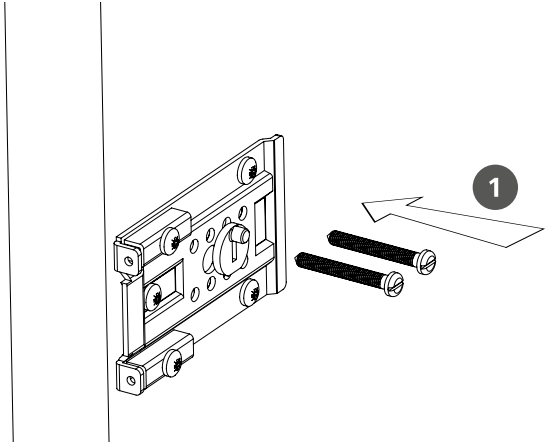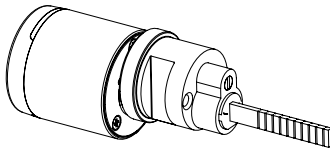


1

8



 
CHECK

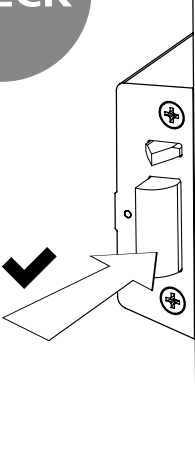

2

1x

 1

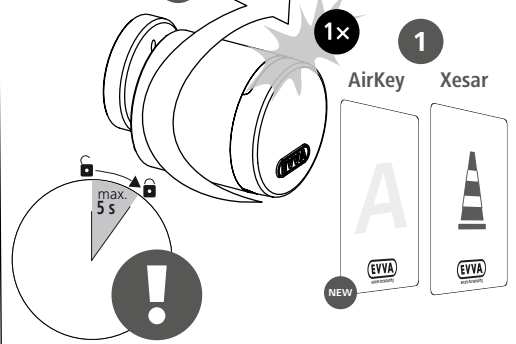

AirKey

Xesar

NEW

 
 
9

AirKey



<https://airkey.evva.com>

Xesar

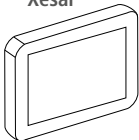

CE UK UK
NI CA



www.evva.com

EVVA Sicherheitstechnologie GmbH | Wienerbergstraße 59-65 | A-1120 Wien