

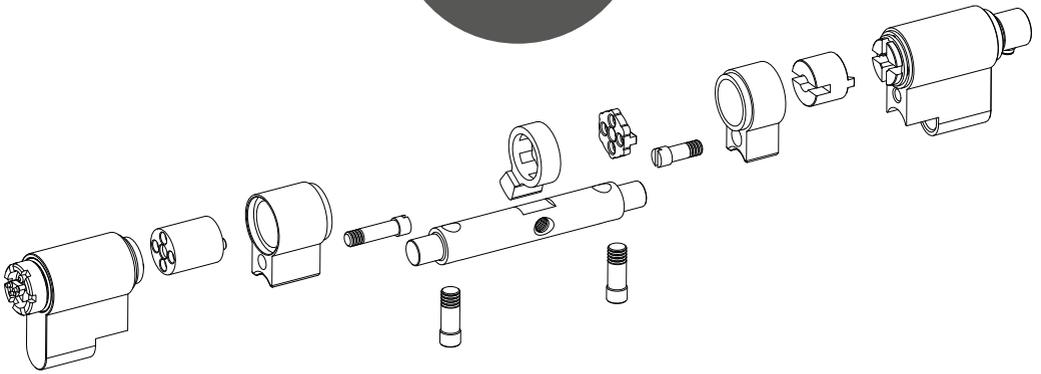
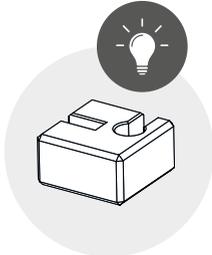


SY-MO

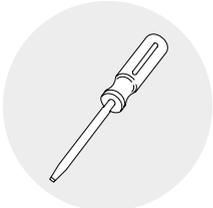


Xesar & AirKey

Montageanleitung | Assembly manual | Montagehandleiding
Instructions de montage | Istruzioni di montaggio | Montážní návody
Montážne návody | Instrukcje montażu | Installationsanvisningar

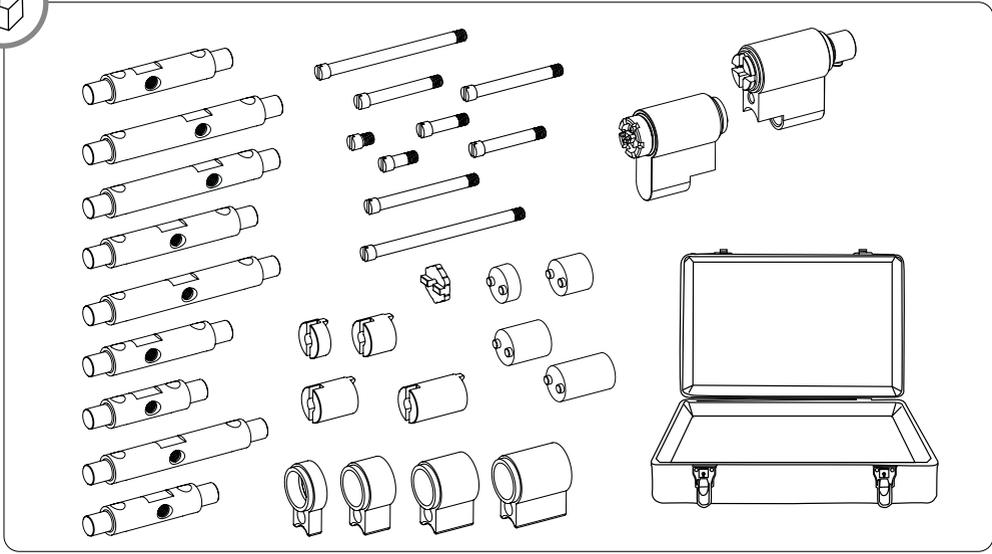


M.TE.43570111

M.TE.9801395

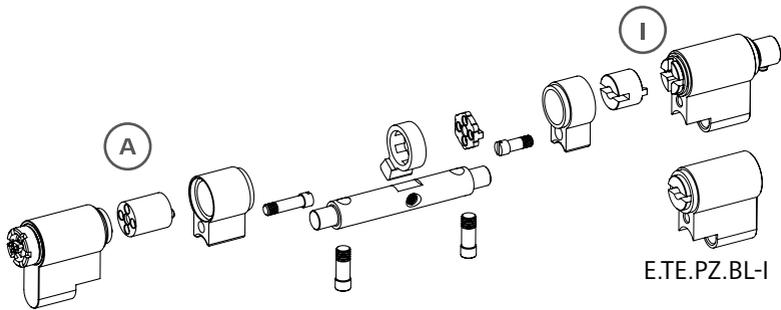

E.TE.PZ.BL-I

E.TE.PZ.PZ13

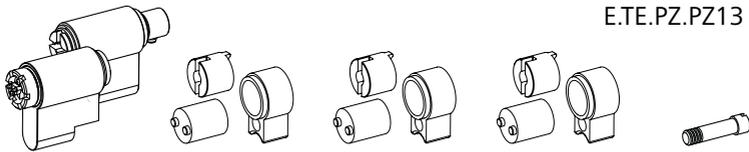


A/I


31	✓	-	-	-	-
36	✓	5	-	-	5
41	✓	10	-	-	10
46	✓	15	-	-	15
51	✓	20	-	-	20
56	✓	15	10	-	25
61	✓	15	15	-	30
66	✓	20	15	-	35
70	✓	20	20	15	40
76	✓	15	15	15	45
81	✓	20	15	15	50
86	✓	20	20	15	55
91	✓	20	20	20	60



 
5




10

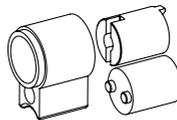


15

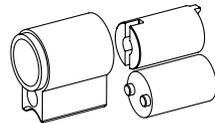


15

 

1

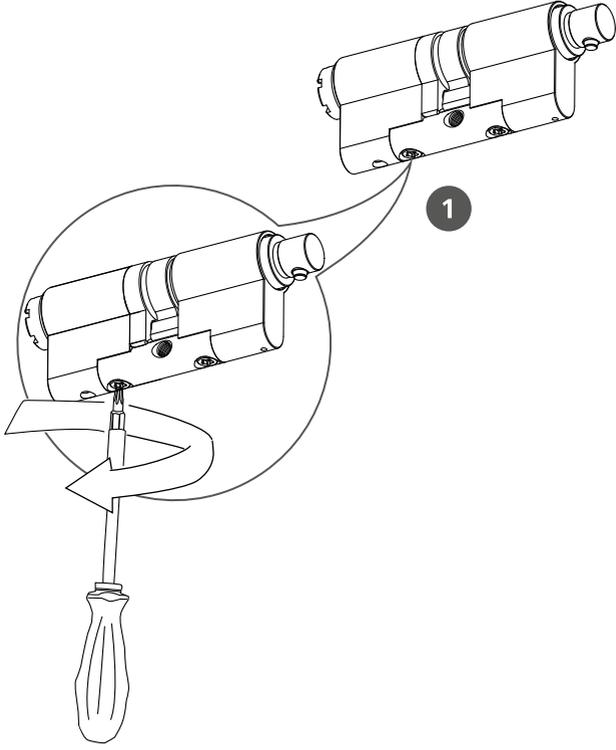


2

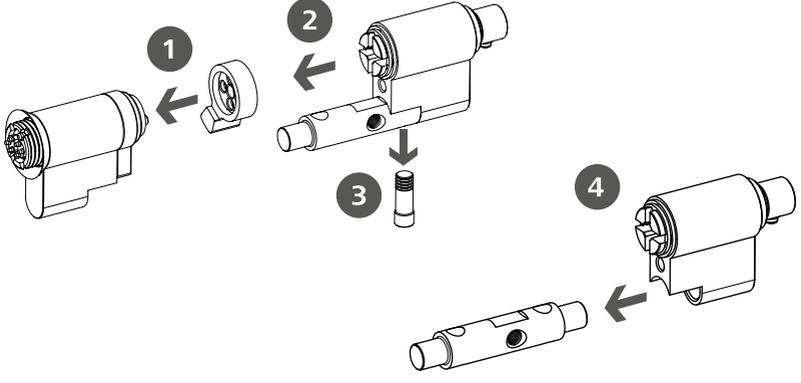

3

Option

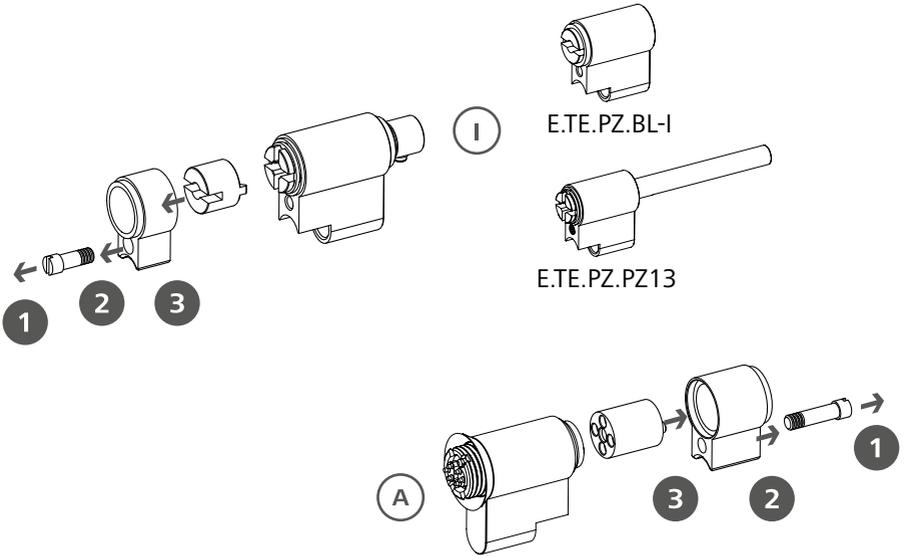



4



2,5 Nm



A

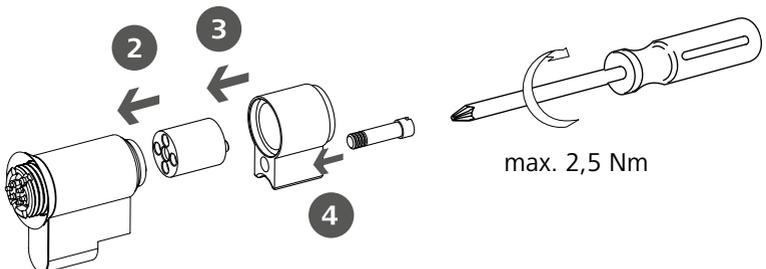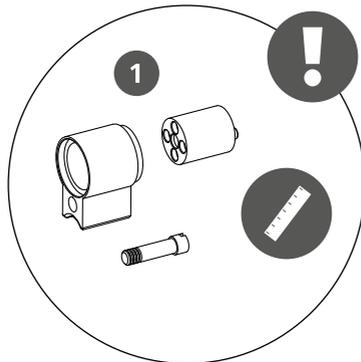



5



2,5 Nm




I

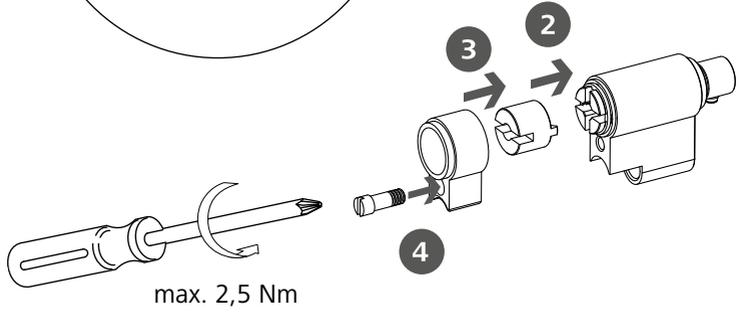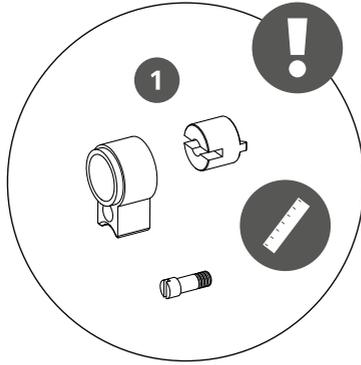

6



 31/31



31/36



31/41




36/36




36/41




...

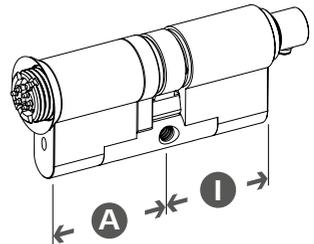


7

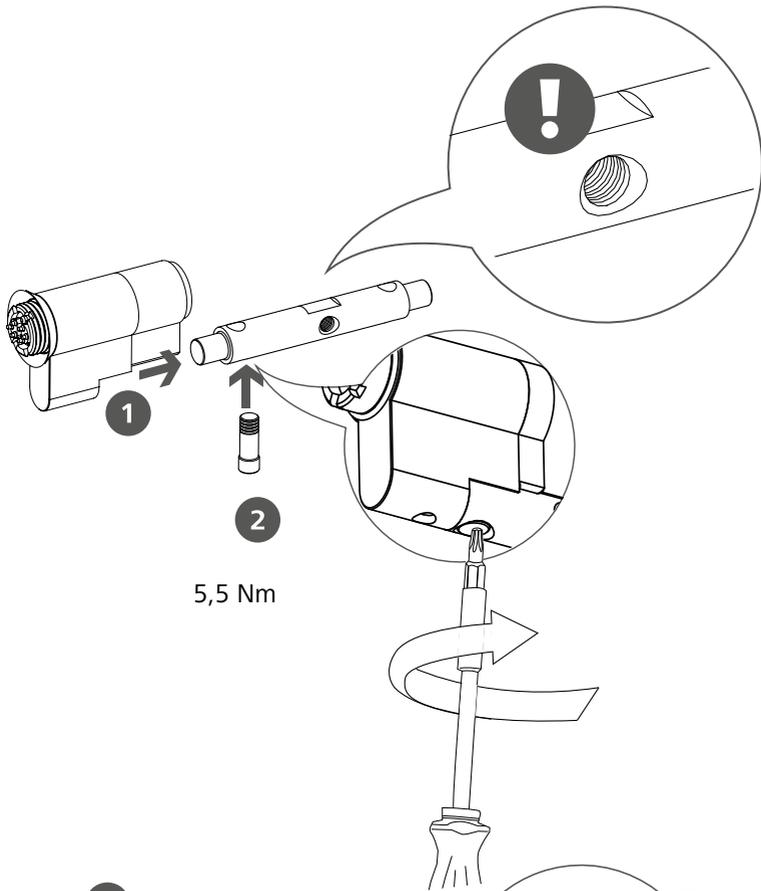


8

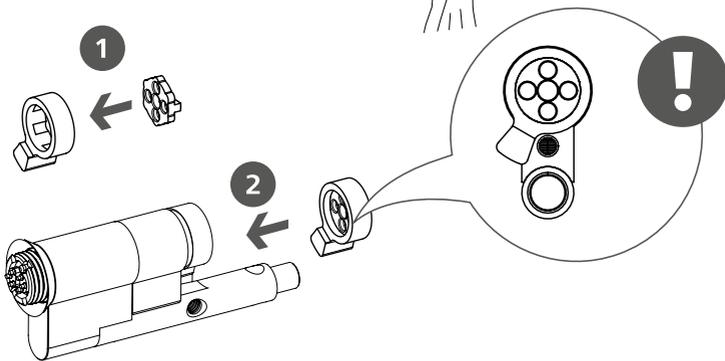

Option

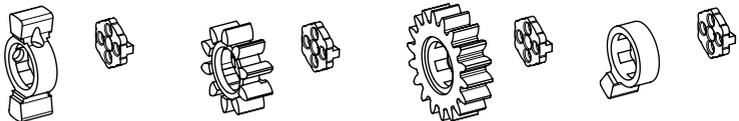

9

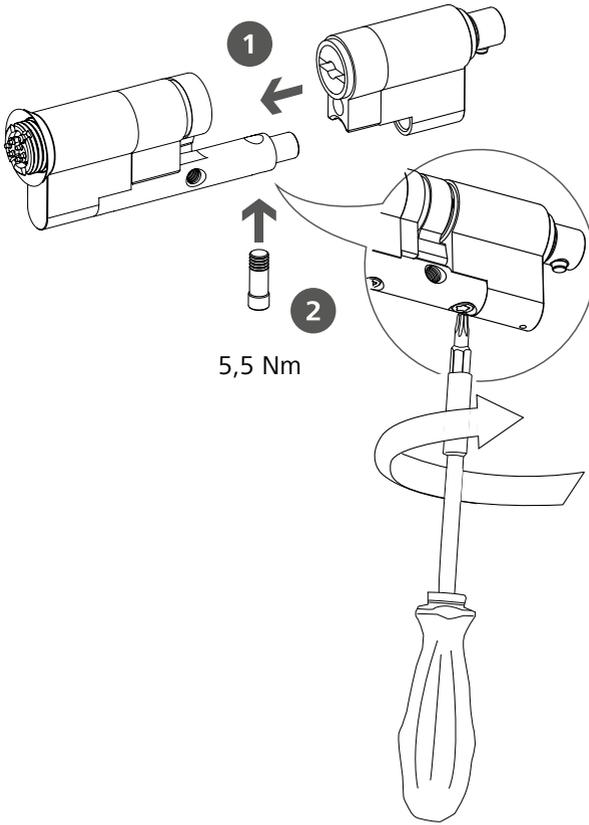

5,5 Nm

10

CHECK

