 


E.X.AI.AZ37
E.X.AI.IZ37
E.A.AI.AZ37
E.A.AI.IZ37





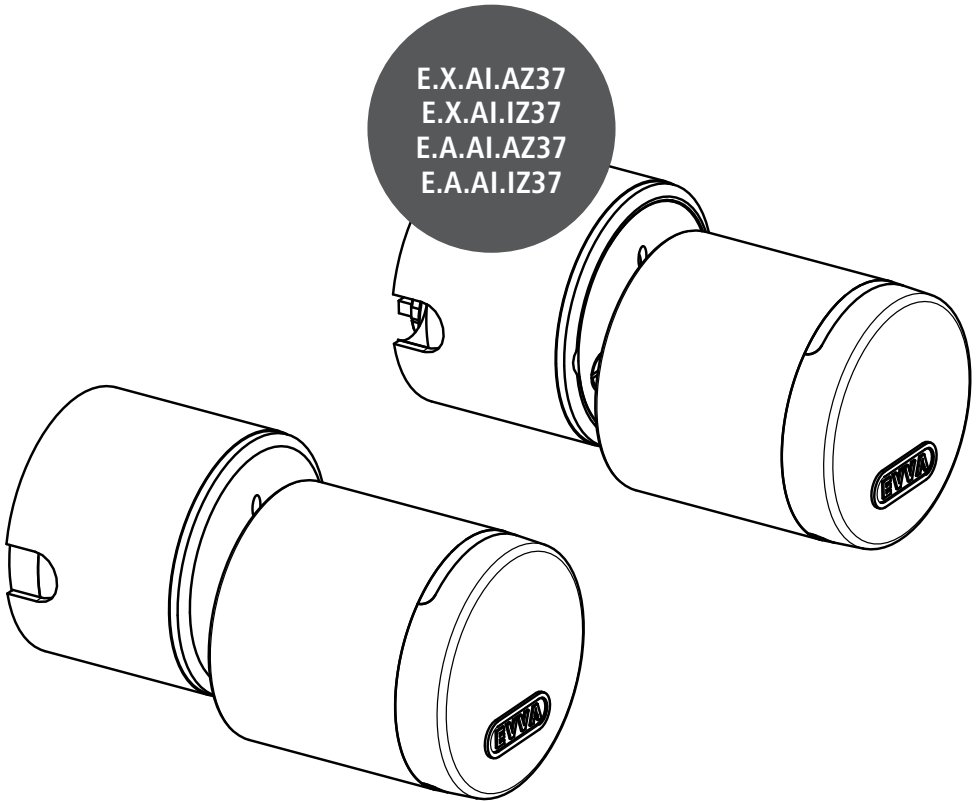


Xesar & AirKey







Montageanleitung | Assembly manual | Montagehandleiding

Instructions de montage | Istruzioni di montaggio | Montážní návody




Montážne návody | Instrukcje montażu | Installationsanvisningar

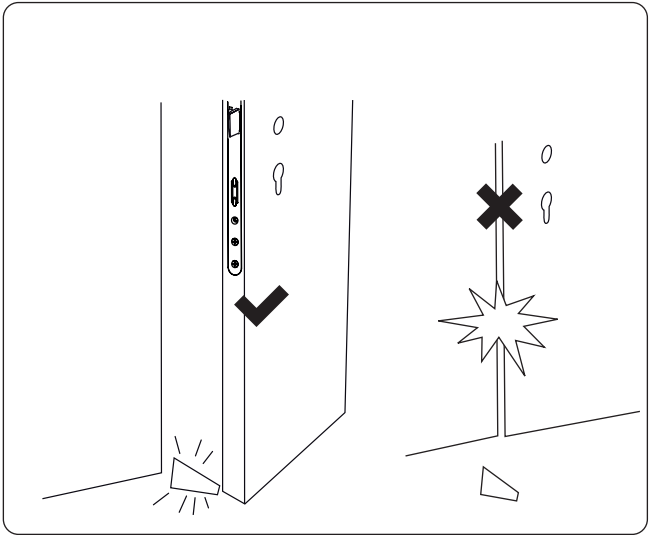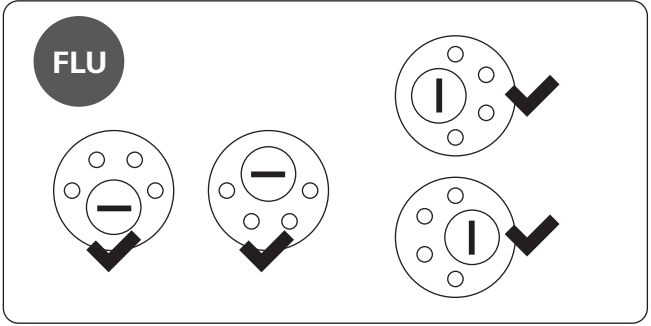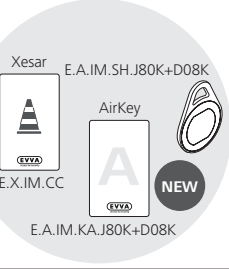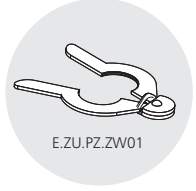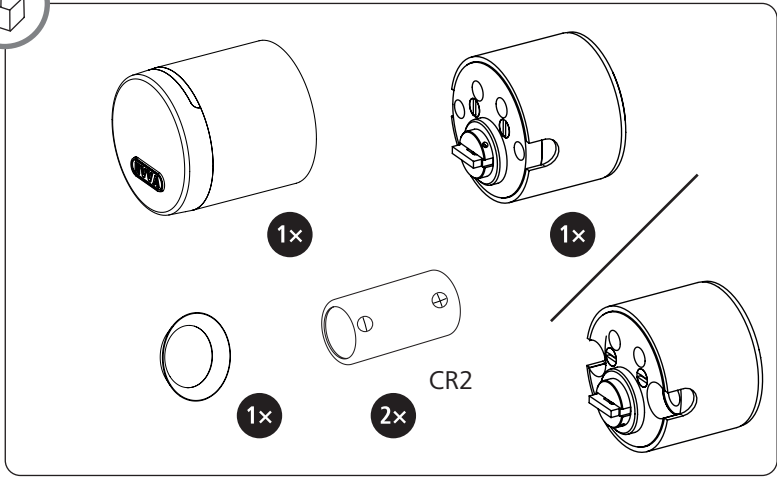     



1

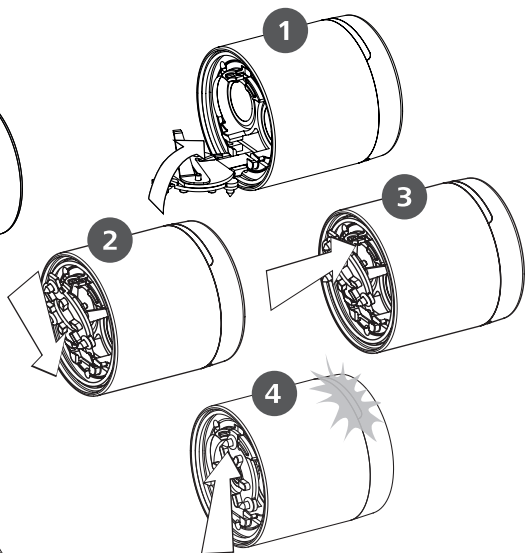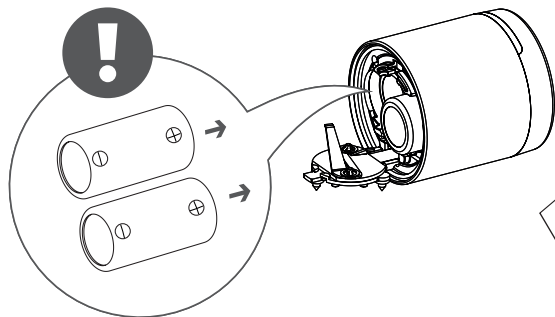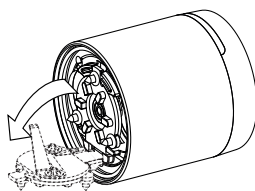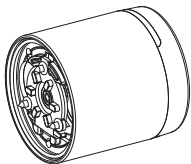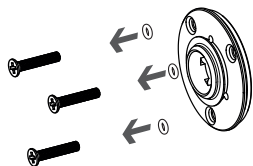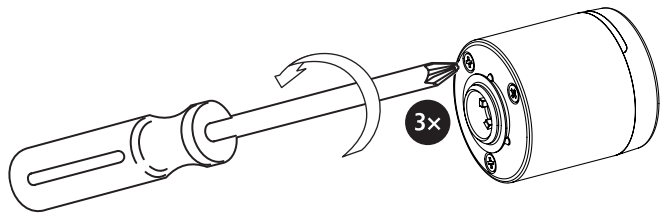      





IP65 ✓

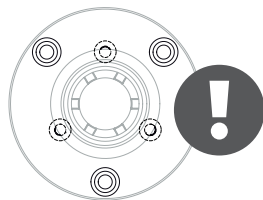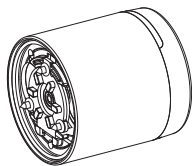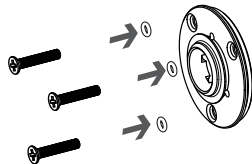   


0,5 Nm

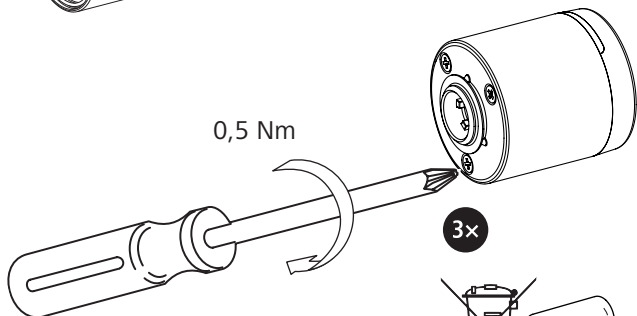  


2

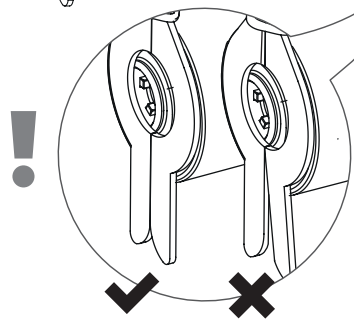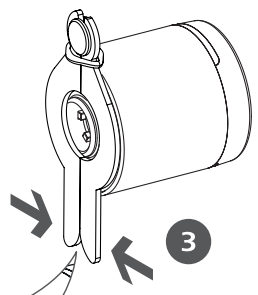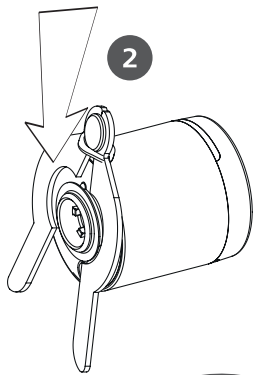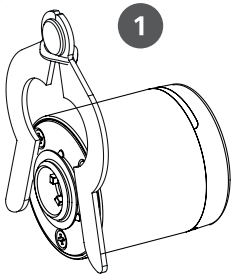    


3

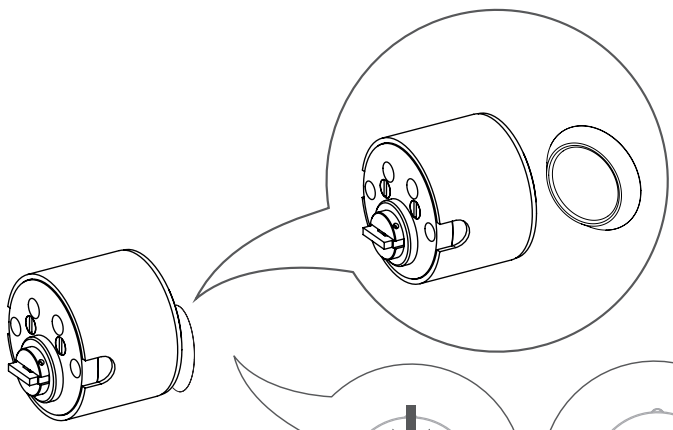 



IP65 ✓

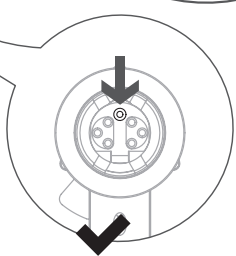 

4

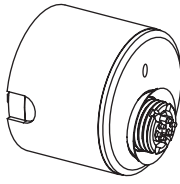 


1

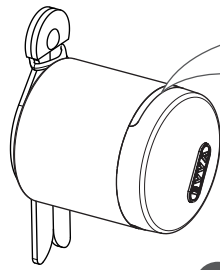  


2

 ~5x



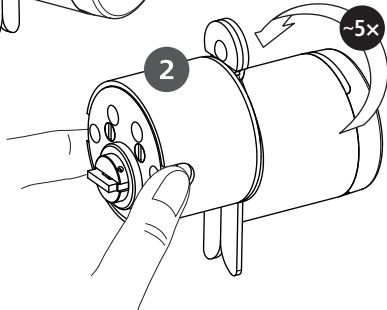


5

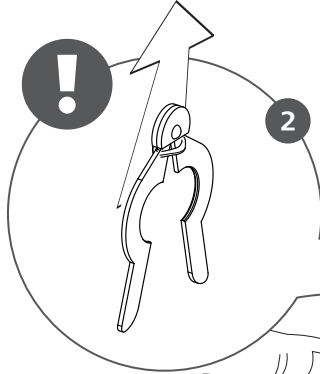 


2

   1

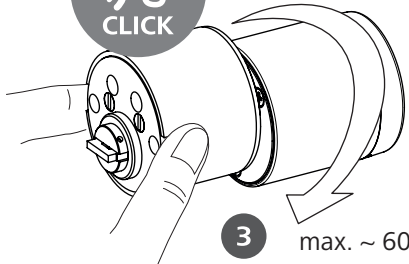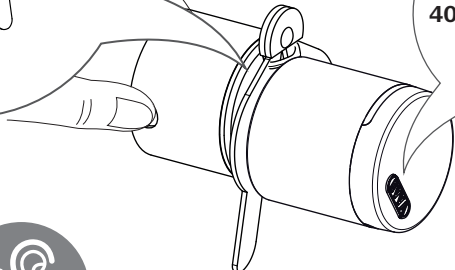


3

 max. ~ 60°


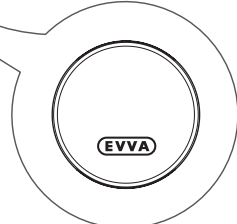


6

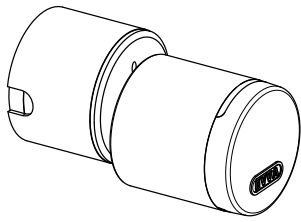 



1

  AirKey Xesar

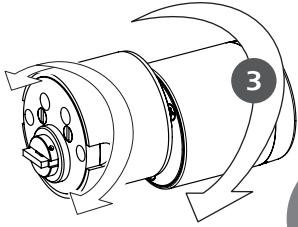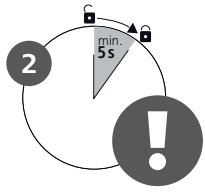

3

  CHECK

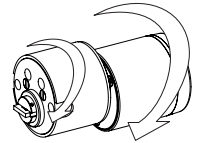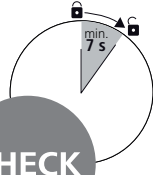

7


2



AZ37




 1

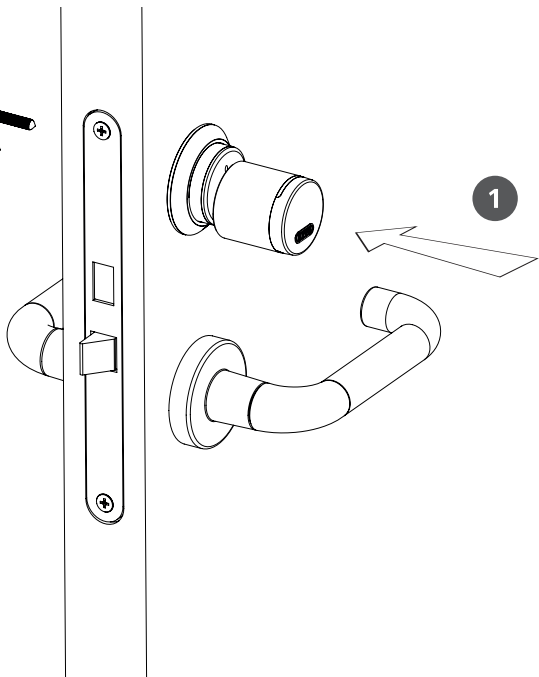


7

 IZ37

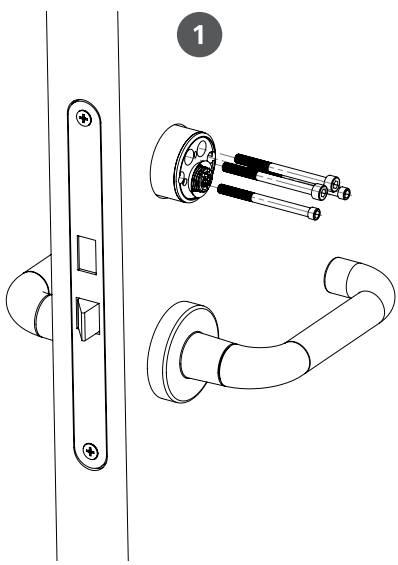

max. 1,5 Nm


 
2

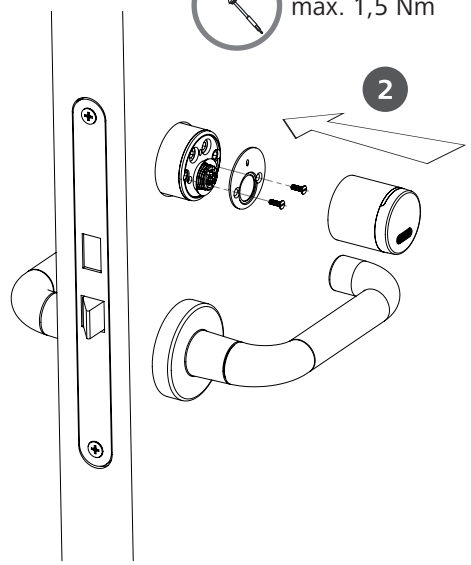

8



  CHECK

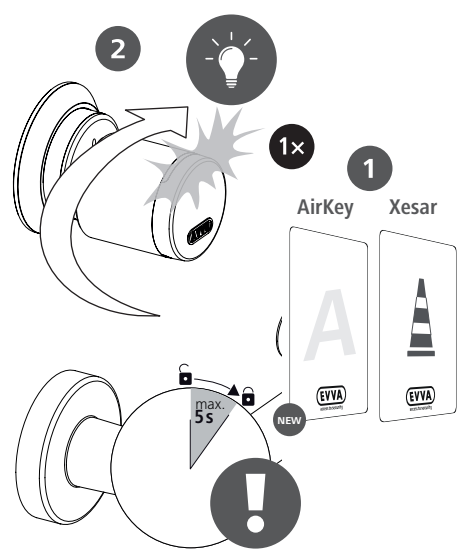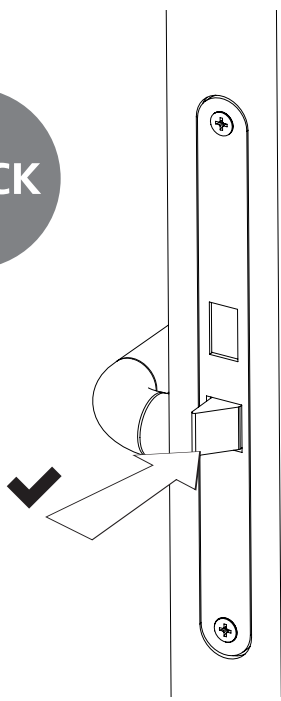

9



<https://airkey.evva.com>

