



 
Xesar



AirKey










E.X.PZ.KZ-S  
E.A.PZ.KZ-S










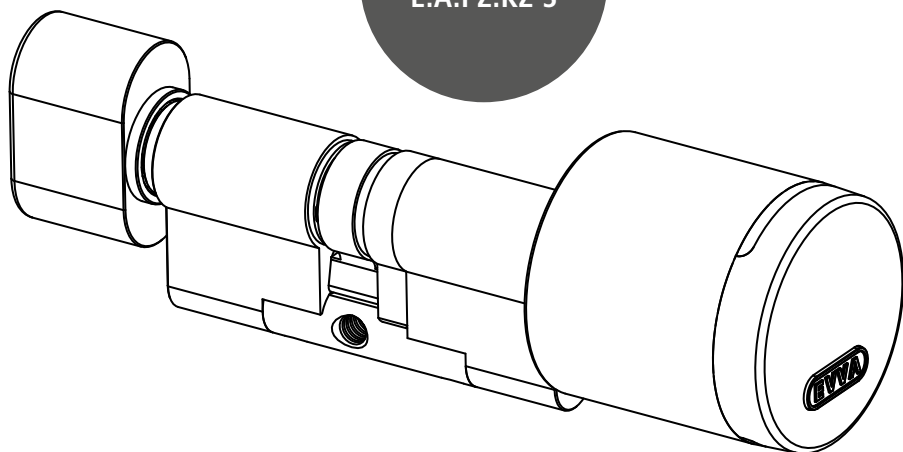


# Xesar & AirKey

      
 
Montageanleitung | Assembly manual | Montagehandleiding  
Instructions de montage | Istruzioni di montaggio | Montážní návody  
Montážne návody | Instrukcje montażu | Installationsanvisningar

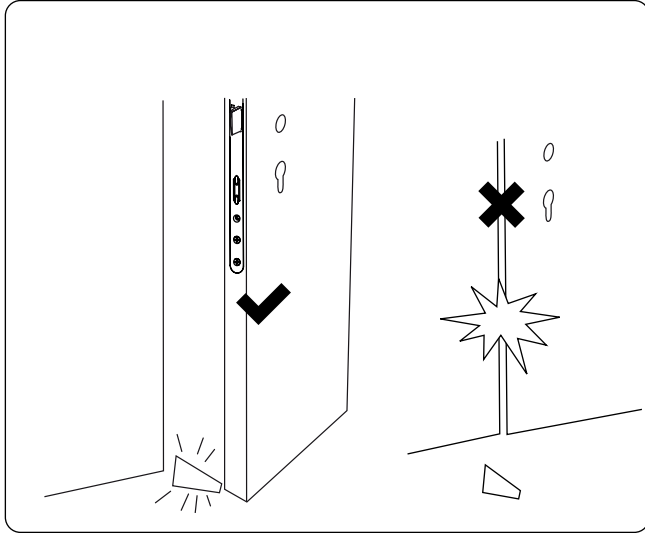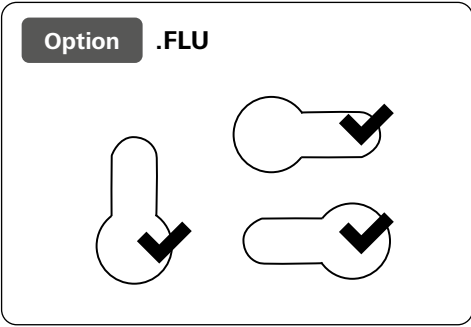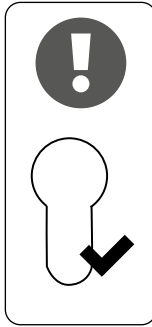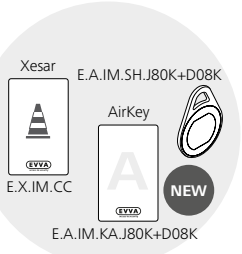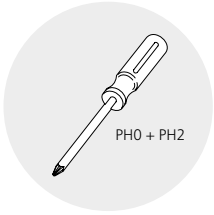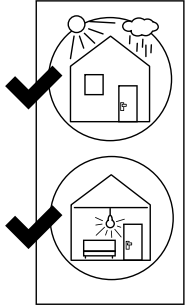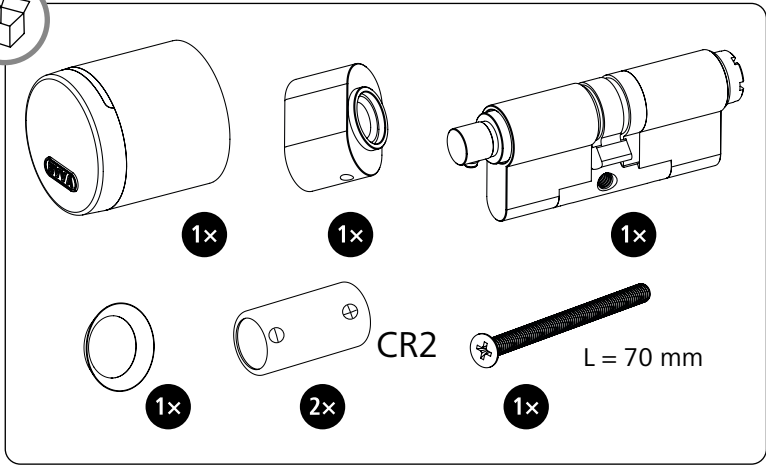




1

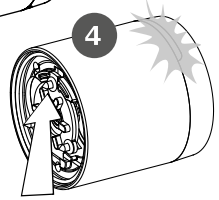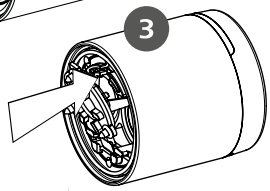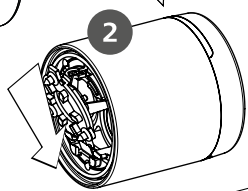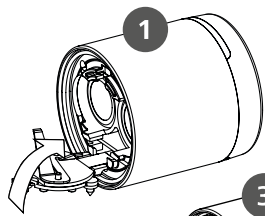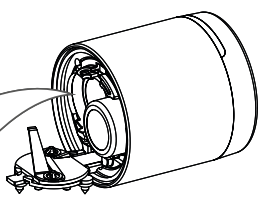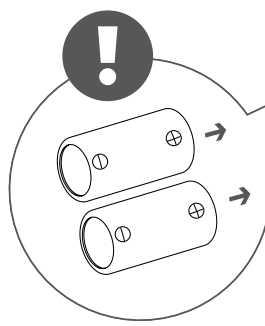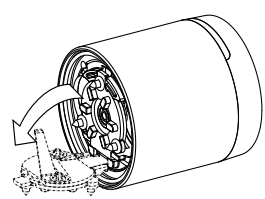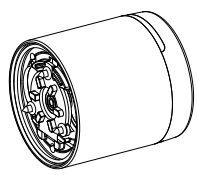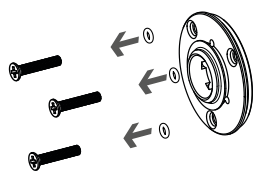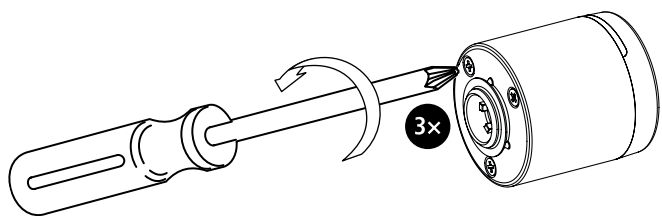          


IP65 ✓

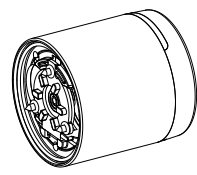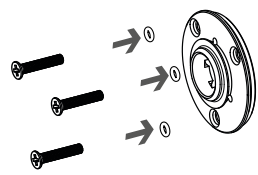  


max. 0,5 Nm

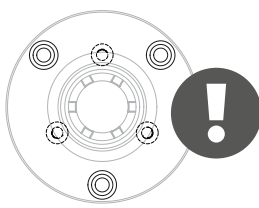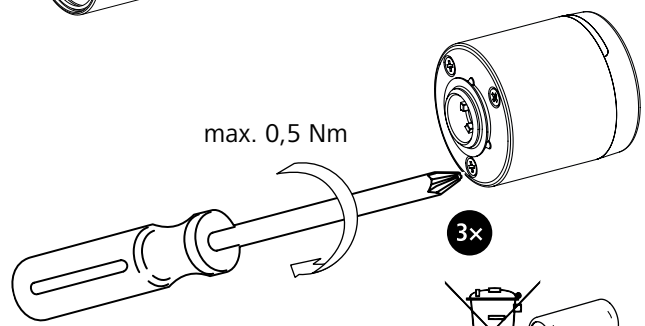   


2

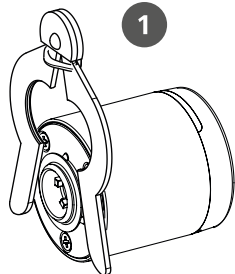 


1

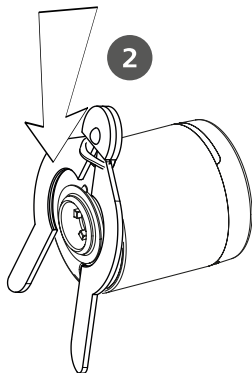 

2

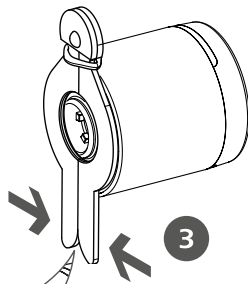 





3

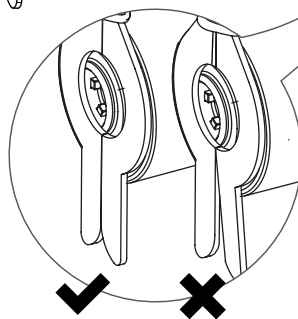 


IP65



  
 
 
3

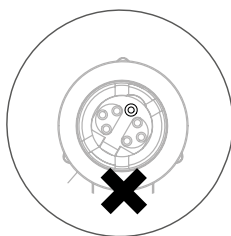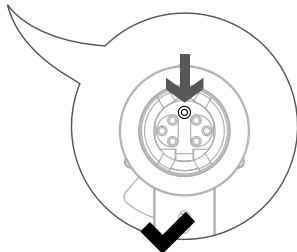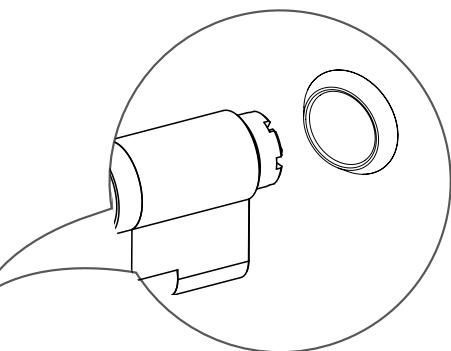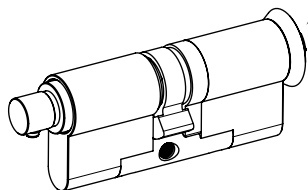



4

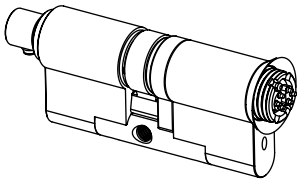 

1

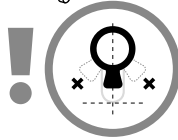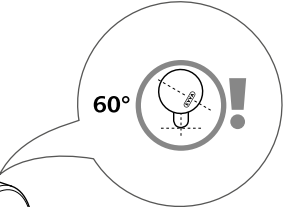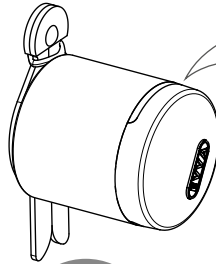   


2

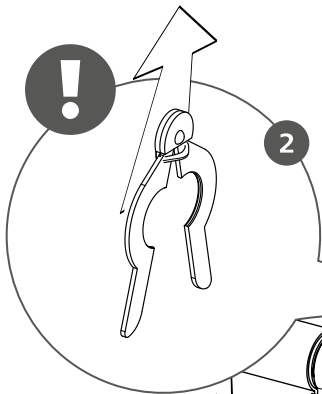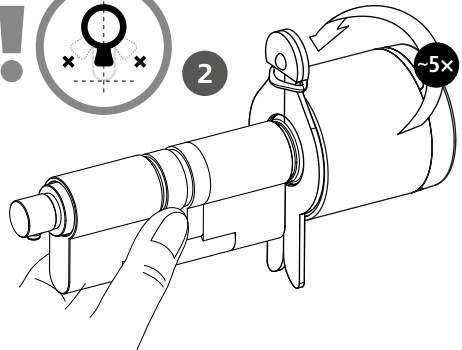  


2

 
5

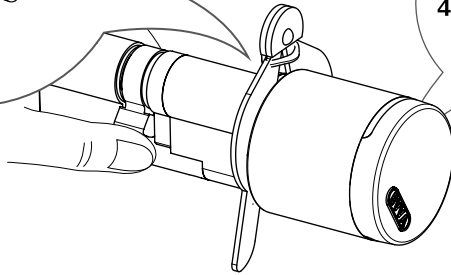


1

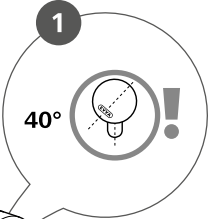 


40°

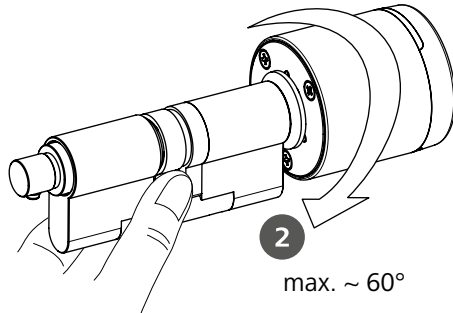 


2

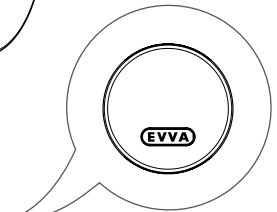 

max. ~ 60°

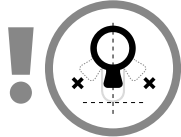 


6

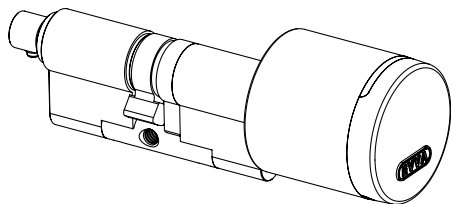 


1

AirKey

 
Xesar





NEW

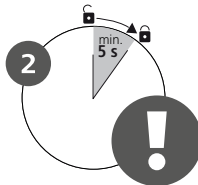 

CHECK

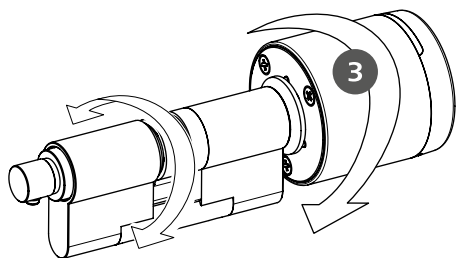 

7

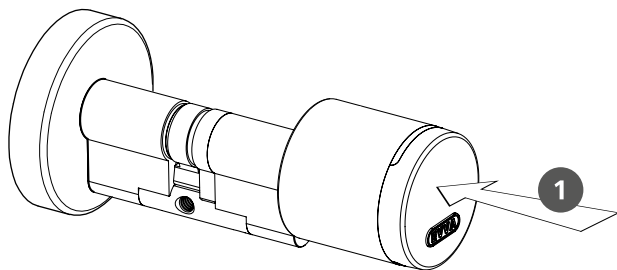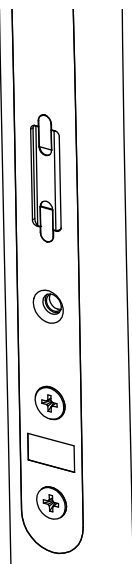  

2

 
1

AirKey

Xesar










NEW

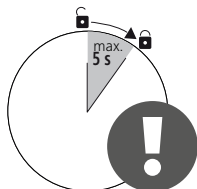

8




       max. 4 Nm

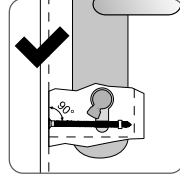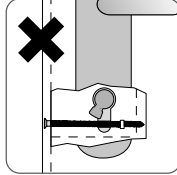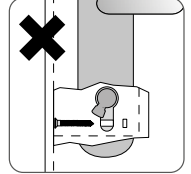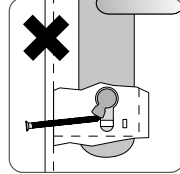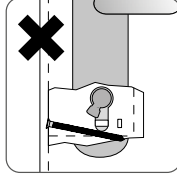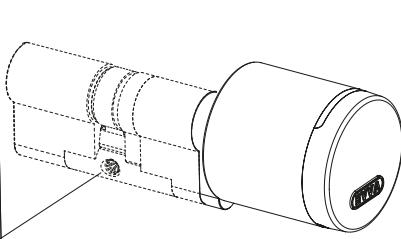
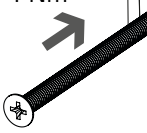


DM ≤ 60 mm  
 → L = 70 mm ✓

 DM > 60 mm  
 → L = DM + 10 mm

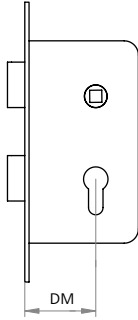




9

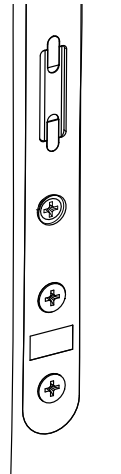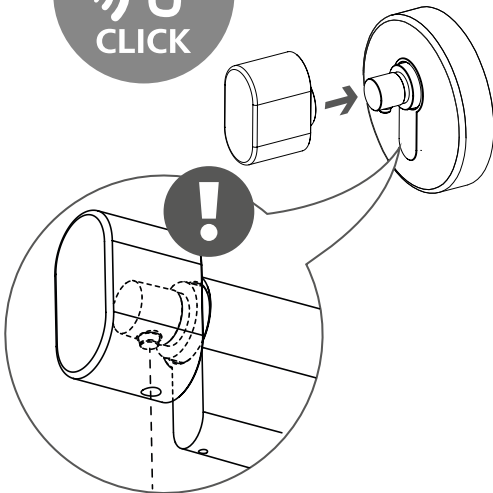  

10



   CHECK

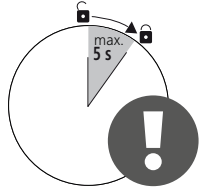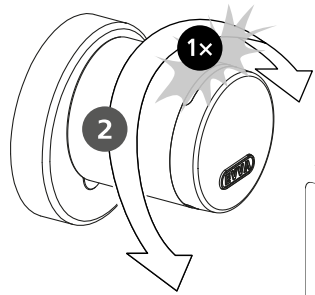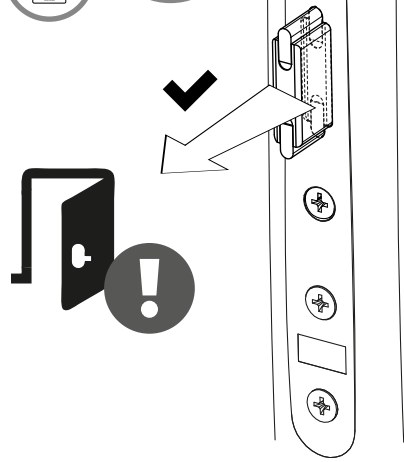

1

AirKey

Xesar



 
NEW

11



<https://airkey.evva.com>

Xesar

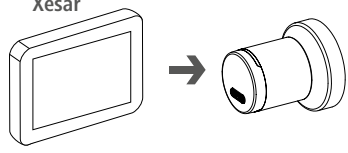

CE UK NI UK CA



[www.evva.com](http://www.evva.com)

EVVA Sicherheitstechnologie GmbH | Wienerbergstraße 59-65 | A-1120 Wien

I:SF-EL-KZS-AN-MNT-SN-LN