


E.X.BE.ZO



Xesar

Montageanleitung | Assembly manual | Montagehandleiding
Instructions de montage | Istruzioni di montaggio | Montážní návody
Montážne návody | Instrukcje montażu | Installationsanvisningar





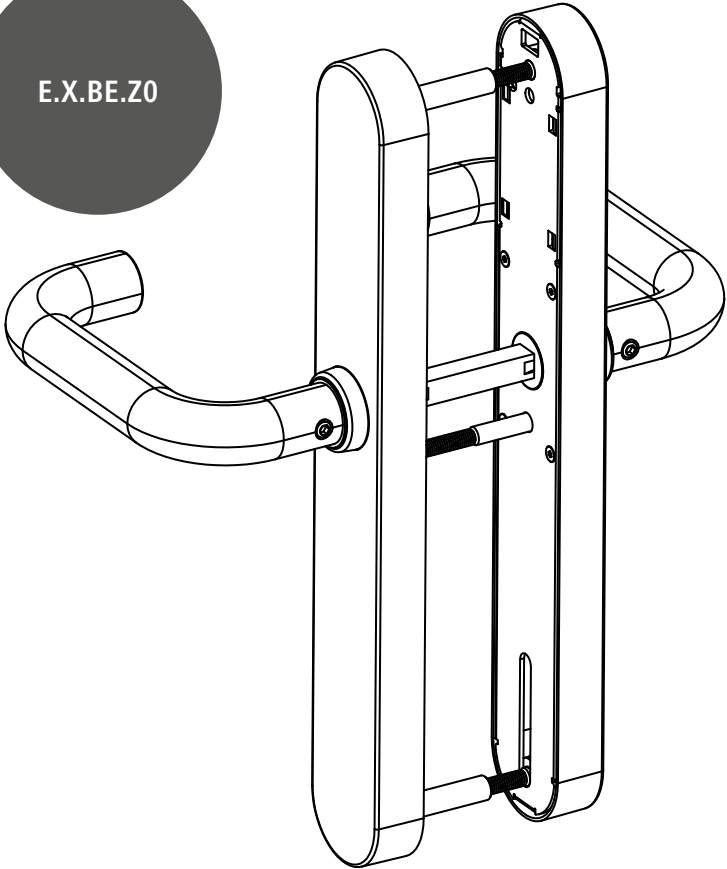








E.X.BE.ZO.U.



R

W

L

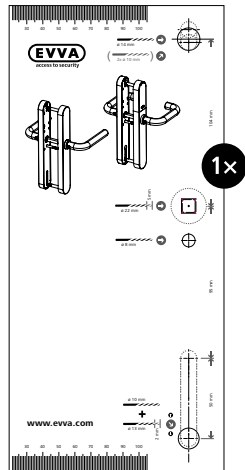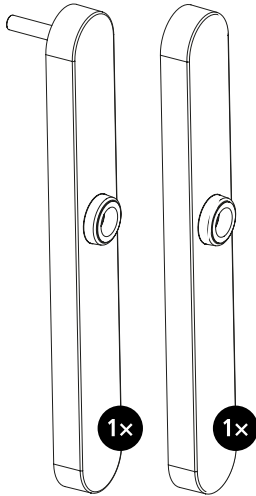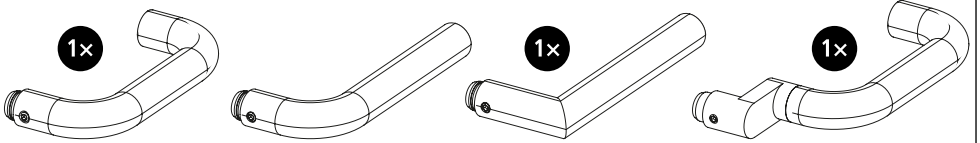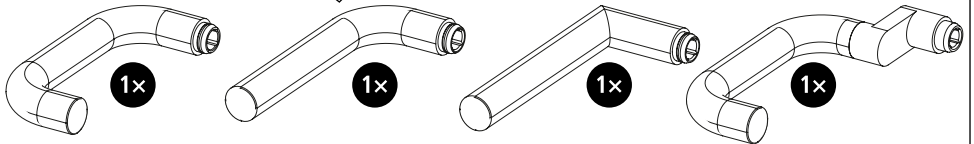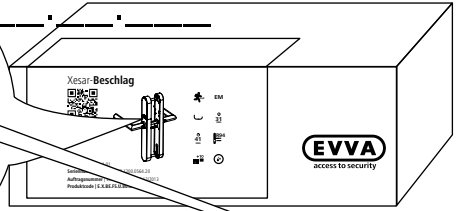


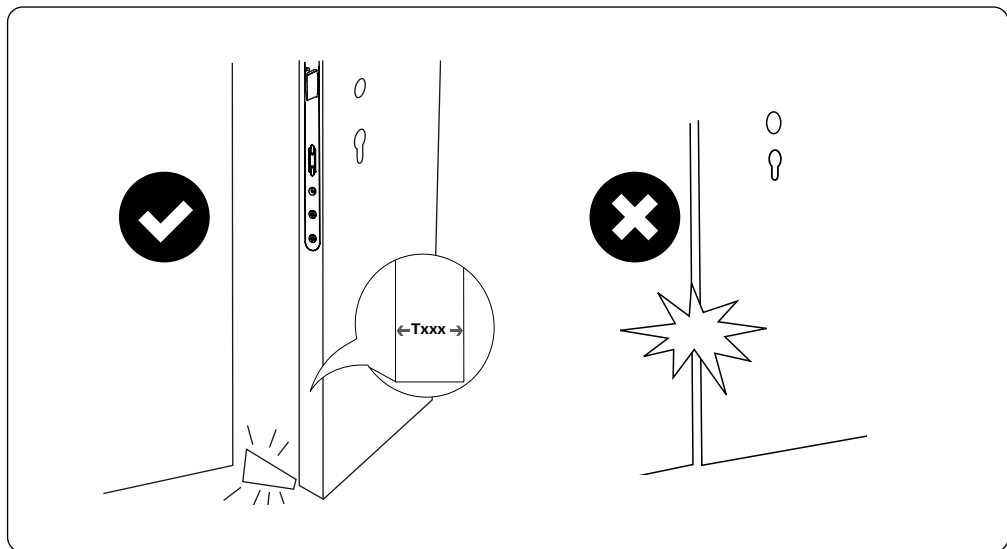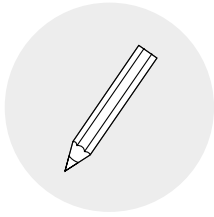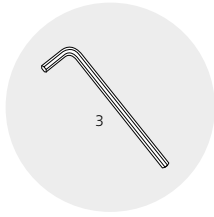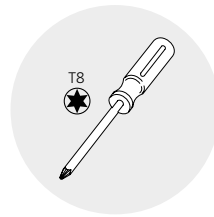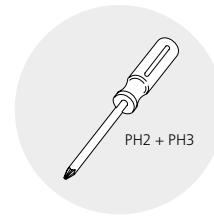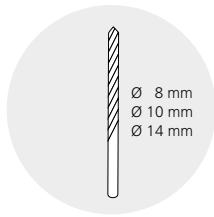




	U	L	W	R		
38-41 mm	160 mm	160 mm	160 mm	135 mm	1x 50 mm 2x 30 mm	-
42-45 mm	160 mm	160 mm	160 mm	135 mm	1x 60 mm 2x 30 mm	2x
46-47 mm	160 mm	160 mm	160 mm	135 mm	1x 60 mm 2x 30 mm	1x
48-49 mm	160 mm	160 mm	160 mm	135 mm	1x 60 mm 2x 30 mm	-
50-51 mm	160 mm	160 mm	160 mm	135 mm	1x 60 mm 2x 30 mm	-
52-54 mm	160 mm	160 mm	160 mm	135 mm	1x 70 mm 2x 30 mm	2x
55 mm	160 mm	160 mm	160 mm	135 mm	1x 70 mm 2x 50 mm	2x
56-57 mm	160 mm	160 mm	160 mm	135 mm	1x 70 mm 2x 50 mm	1x
58-61 mm	160 mm	160 mm	160 mm	135 mm	1x 70 mm 2x 50 mm	-
62-65 mm	160 mm	160 mm	160 mm	160 mm	1x 80 mm 2x 50 mm	2x
66-76 mm	160 mm	160 mm	160 mm	160 mm	1x 80 mm 2x 50 mm	1x
68-71 mm	160 mm	160 mm	160 mm	160 mm	1x 80 mm 2x 50 mm	-
72-74 mm	160 mm	160 mm	160 mm	160 mm	1x 90 mm 2x 50 mm	2x
75 mm	160 mm	160 mm	160 mm	160 mm	1x 90 mm 2x 70 mm	2x
76-77 mm	160 mm	160 mm	160 mm	160 mm	1x 90 mm 2x 70 mm	1x
78-81 mm	160 mm	160 mm	160 mm	160 mm	1x 90 mm 2x 70 mm	2x
82-85 mm	160 mm	160 mm	160 mm	160 mm	1x 100 mm 2x 70 mm	2x
86-87 mm	160 mm	160 mm	160 mm	160 mm	1x 100 mm 2x 70 mm	1x
88-90 mm	160 mm	160 mm	160 mm	160 mm	1x 100 mm 2x 70 mm	-
91 mm	190 mm	190 mm	190 mm	190 mm	1x 100 mm 2x 70 mm	-
92-95 mm	190 mm	190 mm	190 mm	190 mm	1x 110 mm 2x 70 mm	2x
96-97 mm	190 mm	190 mm	190 mm	190 mm	1x 110 mm 2x 80 mm	1x
98-101 mm	190 mm	190 mm	190 mm	190 mm	1x 110 mm 2x 80 mm	-
102-105 mm	190 mm	190 mm	190 mm	190 mm	1x 120 mm 2x 80 mm	2x
106-107 mm	190 mm	190 mm	190 mm	190 mm	1x 120 mm 2x 100 mm	1x
108-111 mm	190 mm	190 mm	190 mm	190 mm	1x 120 mm 2x 100 mm	-



1

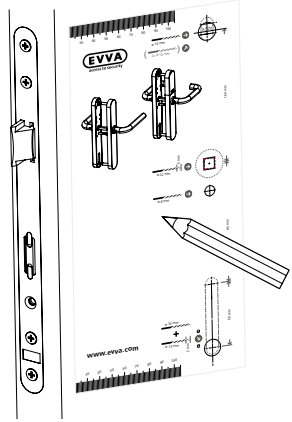


2

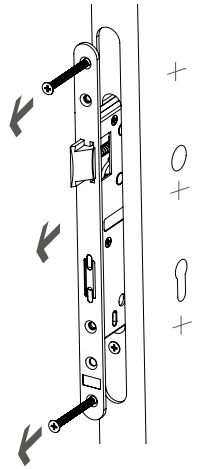


3

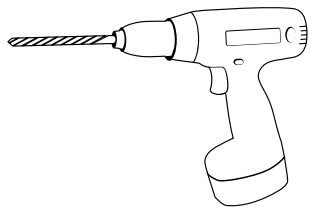


4

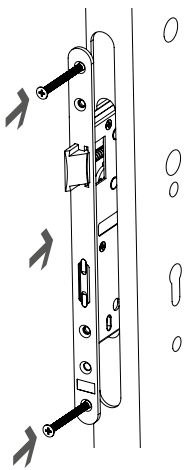


1

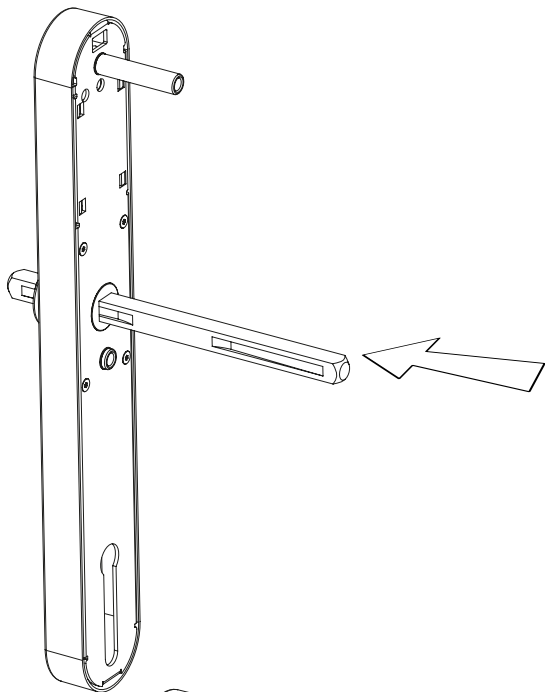


2

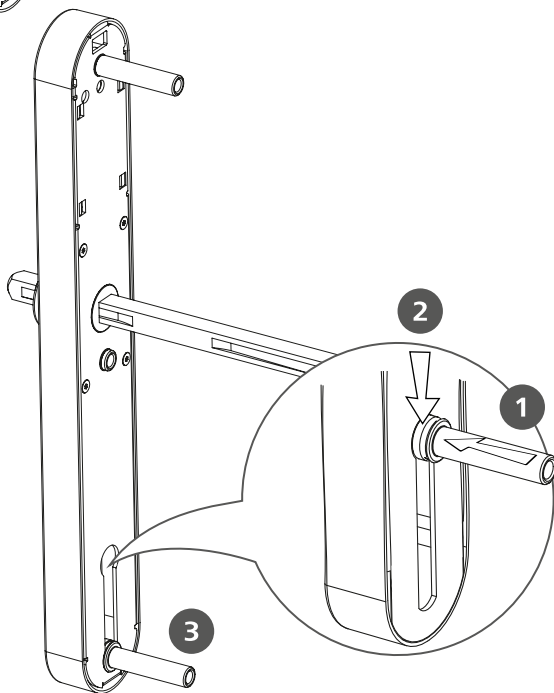


3

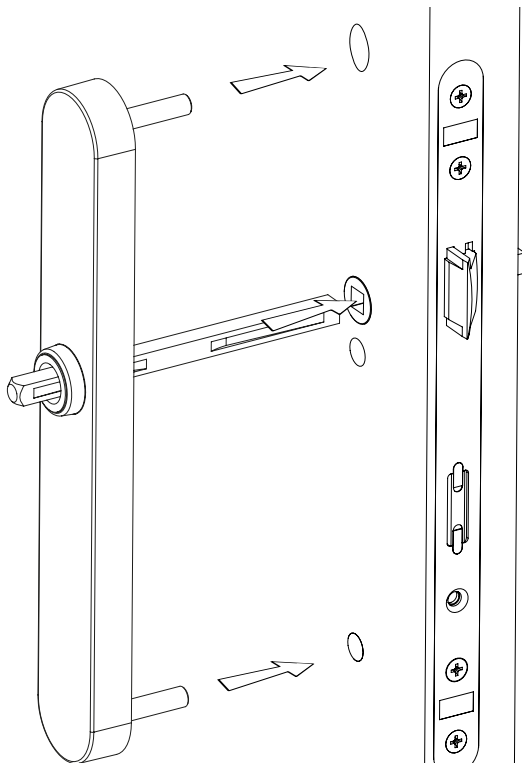



4

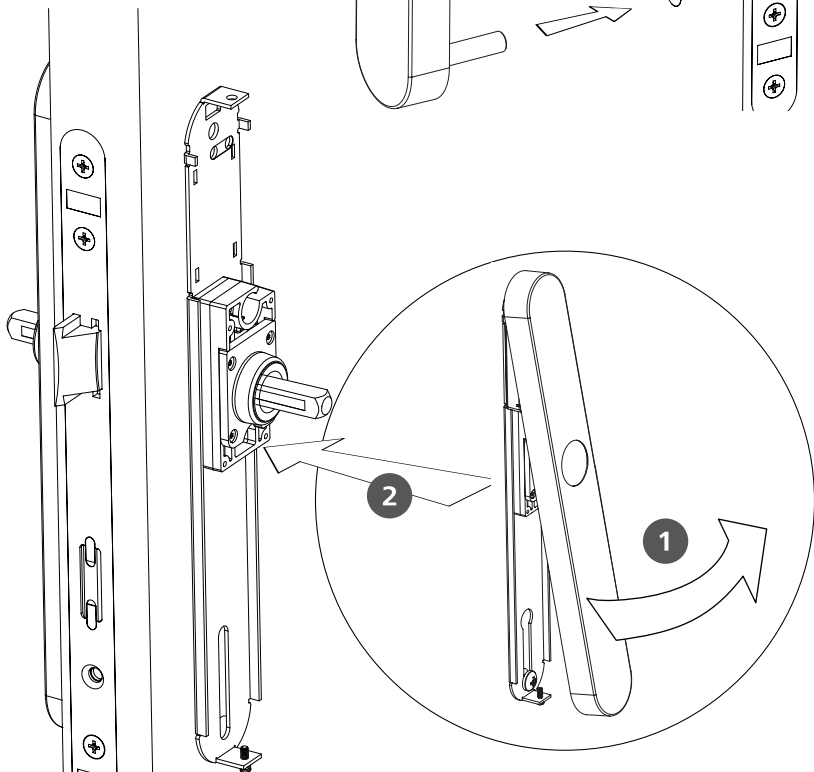


5

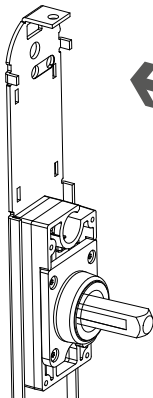


max. 4 Nm

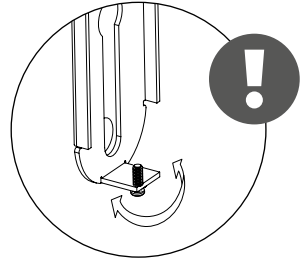



max. 3 Nm



max. 4 Nm



6

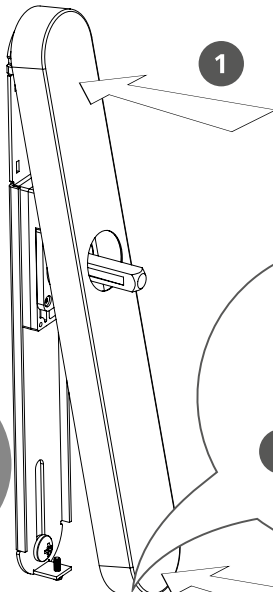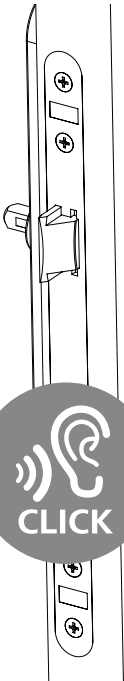

1

3


2



max. 0,5 Nm




7

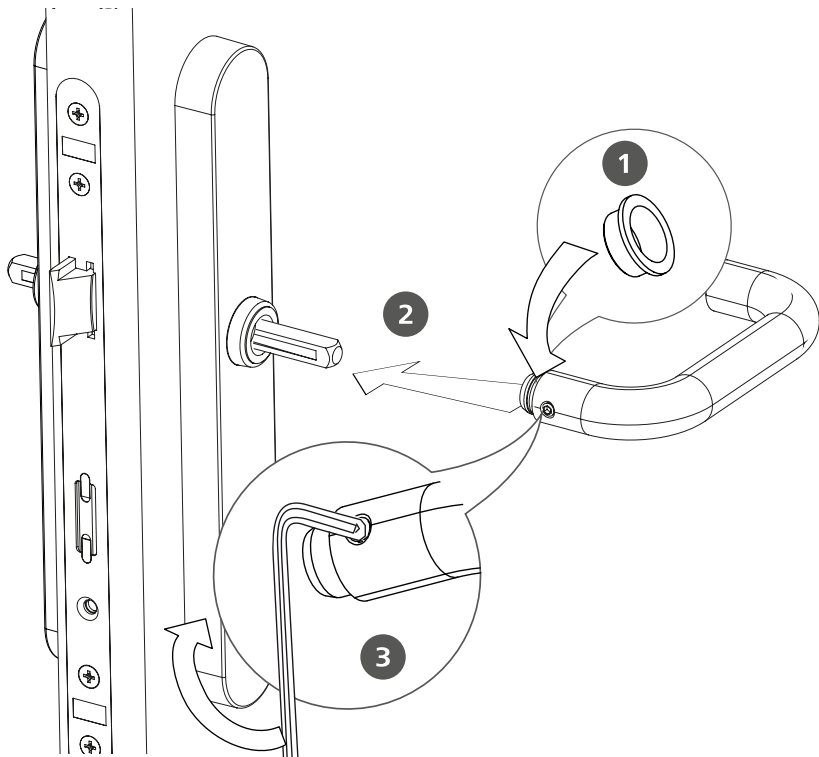




max. 3 Nm













8

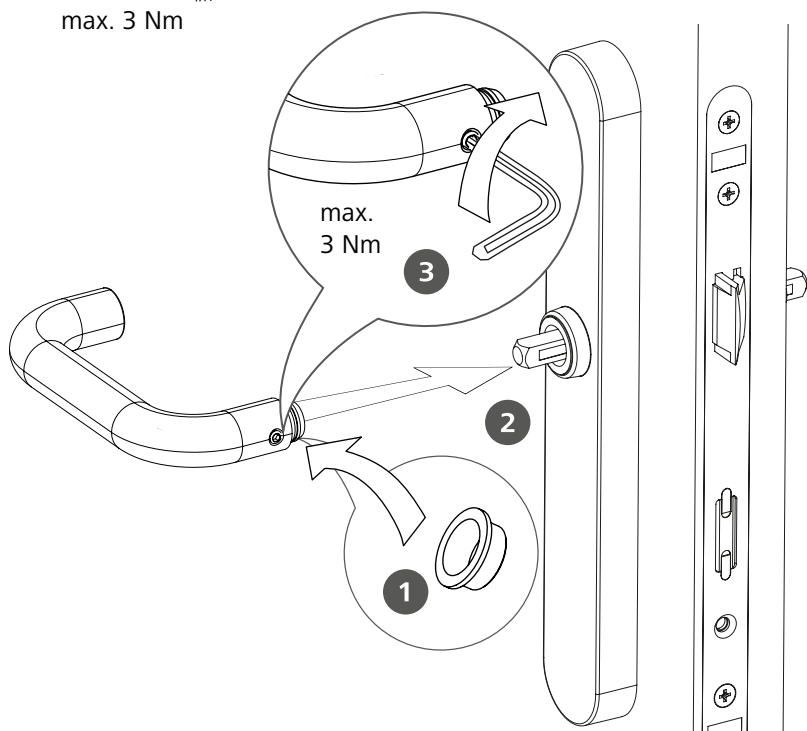


9

CHECK

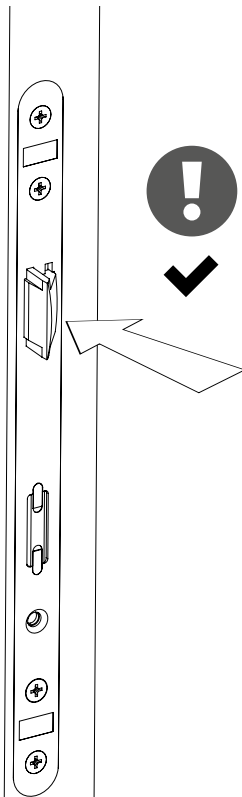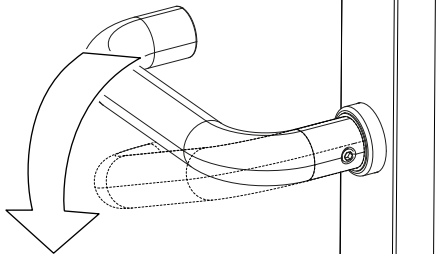

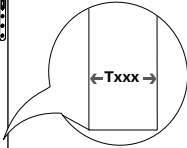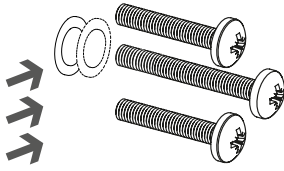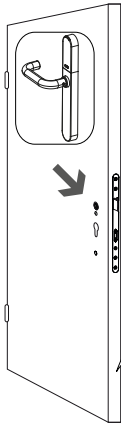

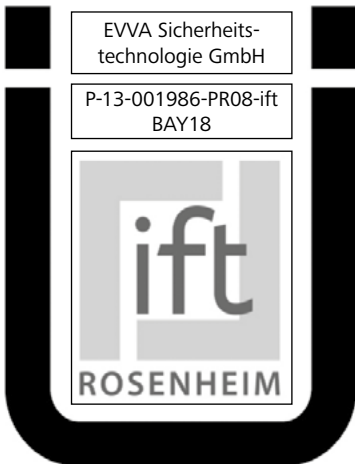

www.evva.com

EVVA Sicherheitstechnologie GmbH | Wienerbergstraße 59–65 | A-1120 Wien